

Table of Contents

1	Device memory, battery-buffered	3
2	Connection of the multicomp 4D6-ESBSDS-1V1C6RO	4
2.1	Installation and assembly	4
2.2	Connection diagram	5
2.3	Terminal assignment	6
3	Commissioning guideline for the multicomp 4D6-ESBSDS-1V1C6RO	7
3.1	Controller not preconfigured	7
3.2	Controller preconfigured	8
4	Funktionen des Reglers im Sicherheits- und Wartungskonzept secureC	9
4.1	Resonanzfrequenzüberwachung der Stufen	9
4.2	Stromaufnahme- und Leistungsüberwachung der Stufen	9
4.3	Stromaufnahme- und Leistungsüberwachung kompletter Schränke	10
4.4	Temperaturüberwachung der Stufen	11
5	Operating and display panel	12
5.1	Description of buttons	12
5.2	Navigation and device displays	13
5.3	Definition of terms	17
5.4	Einstellbereiche der programmierbaren Parameter	19
5.5	Device programming	20
5.6	Start menu Commissioning	20
5.7	Main menu Cos φ	21
5.8	Main menu Voltage / Current	23
5.9	Main menu temperature	24
5.10	Main menu Module - Management	25
5.11	Main menu Stages	26
5.11.1	Submenu Mode	27
5.12	Main menu Uh distortion factor for voltage	28
5.13	Main menu Ih distortion current intensity	29
5.14	Main menu Extras	31
5.14.1	Commissioning	33
5.14.1.1	Submenu Transformer settings	33
5.14.1.2	Submenu Target cosine	34
5.14.1.3	Submenu Stages	35
5.14.2	Settings	38
5.14.2.1	Submenu Modules/Display	38
5.14.2.2	Submenu System	43
5.14.2.3	Service submenu	48
5.14.3	Messages	49
5.14.3.1	Messages submenu	49

5.14.3.2	Monitoring of stages by induced current measurement	51
5.14.3.3	Current consumption and performance monitoring of complete cabinets	51
6	Basic device programming	52
6.1	Set transformer	52
6.2	Set Target cosφ	54
6.3	Note on detecting errors	55
6.3.1	Facility and safety devices maintenance	56
6.3.2	Limit temperatures	56
6.4	Connection chart measuring voltage Ph-Ph	57
7	Technical data	58
7.1	Measuring and display values	58
7.2	Measuring accuracy	58
7.3	Measuring principle	59
7.4	Device memory	59
7.5	Power supply	59
7.6	Hardware inputs	59
7.7	Hardware outputs	59
7.8	Electrical connection	60
7.9	Mechanical data	60
7.10	Standards and Miscellaneous	60
7.11	Default settings after reset	61
8	Appendix	62
8.1	Temperature module - connection chart	62
8.1.1	Terminal assignment	62
8.1.2	LED display	62
8.1.3	Additional modules – function of the DIP switches	62
8.2	Relay module - connection chart	63
8.2.1	Terminal assignment	63
8.2.2	LED display	63
8.2.3	Function of the DIP switches	63
8.3	Current measuring module - connection chart.....	64
8.3.1	Terminal assignment	64
8.3.2	LED display	64
8.3.3	Function of scan button	64
8.4	Temperature module - connection chart	65
8.4.1	Terminal assignment	65
8.4.2	LED - Display	65
8.4.3	Function of scan button	66
8.4.4	Function of the DIP switches	66
8.5	Relay module - connection chart	67
8.5.1	Terminal assignment	67
8.5.2	LED - Display	67
8.5.3	Function of scan button	67

1 Device memory, battery-buffered

The device is equipped with an internal data memory, which is battery buffered to preserve long-term data. To prevent it from being discharged, this backup battery (e.g. Varta CR 2032) is not built in when the device is delivered, but included separately in the delivery.



Caution

Before the initial commissioning of the device, please insert the backup battery first (as described in the following), as otherwise all storage data would be lost in case of a power failure.


Inserting or replacing backup battery:

1. Disconnect the device from the supply voltage.
2. Lift the upper casing cover with a suitable tool (e.g. a small screwdriver).
3. When replacing a battery, remove the empty battery from the clamp with the tool.
4. Push the new battery into the clamp and make sure that it is inserted correctly and has the right polarity.
5. Put the upper casing cover back on and click it into place by pushing.
6. Reconnect the device to the supply voltage.



Caution

As, when the battery is empty or removed and there is no supply voltage, not only the storage data are lost but the time is not correct anymore either, the time has to be reset in Visual Energy with the corresponding command!

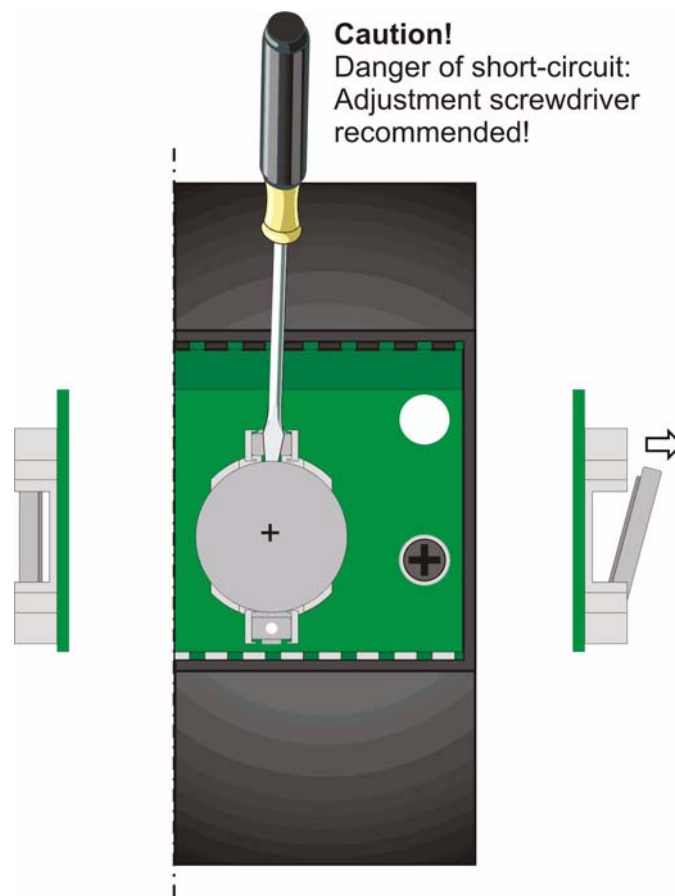

2 Connection of the multicom 4D6-ESB SDS-1V1C6RO

2.1 Installation and assembly

- During installation, the applicable VDE regulations must be observed.
- Before the device is connected to the power supply, you will have to check whether the local power supply conditions comply with the specifications on the nameplate. A wrong connection may destroy the device. A different power frequency influences the measurement accordingly.
- The device must be connected in accordance with the connection diagram.
- In case the facility is subject to lightning hazard, lightning protection measures for the power supply input must be implemented.



Caution

The control voltage as well as the applied measuring voltage of the device must be protected by means of a back-up fuse.

When connecting the current transformer, the direction of the energy flow and the correct assignment to the voltage path must be observed!

During installation, please also observe our notes on safety measures against overvoltage and lightning in the chapter "Protective measures" of this manual.



Note

The following points must be observed when connecting the device:

- Energy flow direction
 - Assigning measuring voltage input / current transformer input
-

Current transformer connection:

- **Energy flow direction:**

When mounting the transformer, observe the current flow or energy flow direction. If the current transformer is mounted the wrong way round, the measured current value will be negative. Prerequisite is that energy is consumed.

- **Assigning measuring voltage input / current transformer input:**

The current transformer on terminal 20/21 (k1/l1) must be arranged in the phase where the measuring voltage for the terminal 10 (L1) is tapped.


- If the connection and energy flow direction are correct, the device displays a positive current.
- If connected incorrectly, the current displayed is negative. Interchange the connections until the display shows correct values.



Caution

Before any interchanging, the current sensing transformer must be shorted out!

2.2 Connection diagram

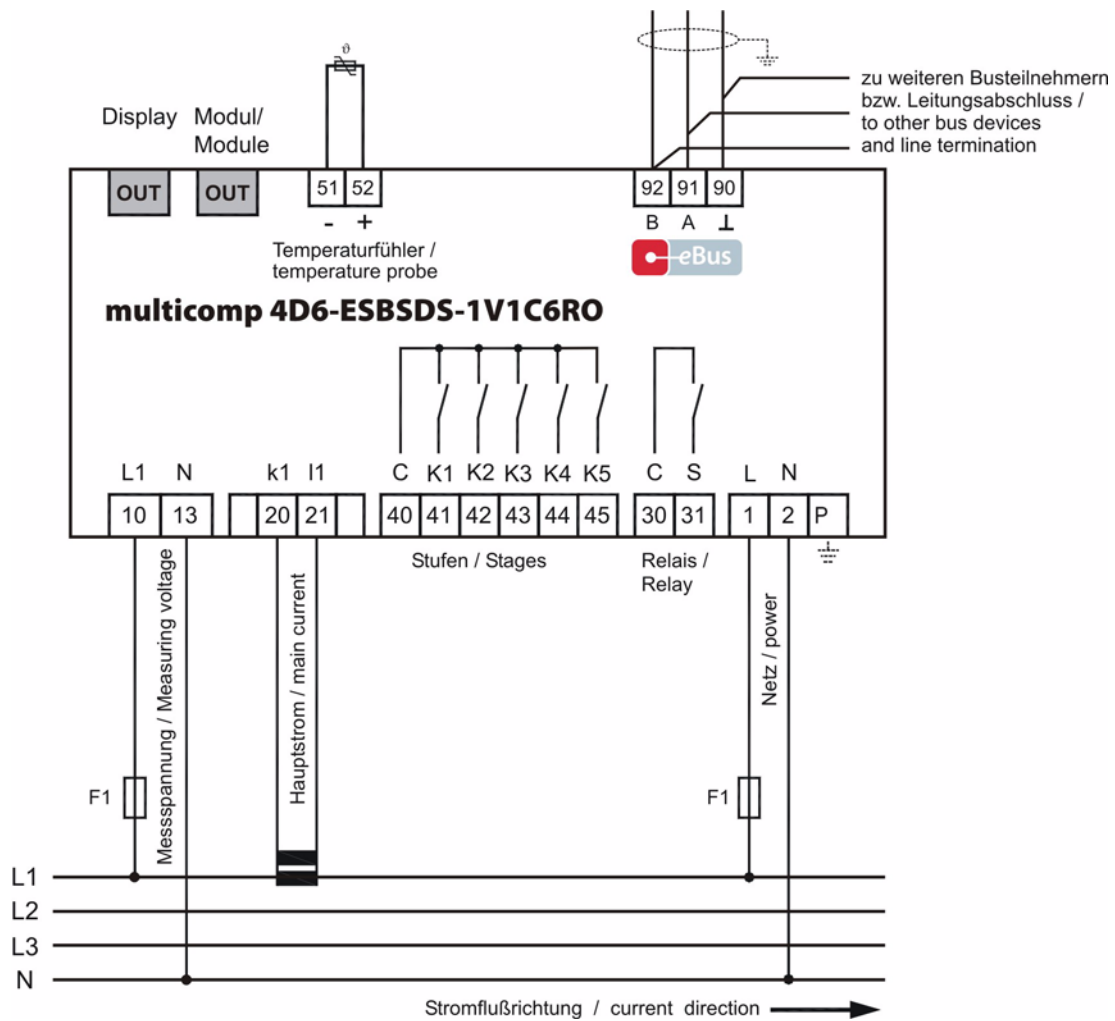

For voltage supply, see nameplate.



Caution

The coil voltage for the capacitor switching contactors and the measurement voltage have to be drawn from the same phase, as only the measurement voltage is monitored (to protect the contactors from direct resetting in case of short-term monophasic power failure)

2.3 Terminal assignment

Terminal 1 (L) and 2 (N):	Connection power supply A control voltage is required to supply the device with power. The device is equipped with a multi-range power supply and may be supplied by voltages from 85 - 265V AC/DC (see nameplate for device voltage).
Terminal 10 (L1, Lx): 13 (N, Ly):	Measuring voltage input Input voltage both as Ph-N and Ph-Ph measurement. Direct measurement for 100... 500...600V AC. Measuring intervals are programmable. Exceeding the measuring interval results in an error message. For higher voltages, connection via voltage transformers is necessary (medium voltage measurement x/100 V), measuring range from 500V to 30.0 KV Ph-Ph.
Terminal 20 (k1) and 21 (I1):	Current measuring inputs The measuring input for current must be connected via a current transformer x/1A AC or x/5A AC. When connecting the transformer, pay attention to the energy flow direction and to the correct assignment of measuring voltage input to current transformer.
Terminal 30 (C) and 31 (S):	Floating relay contact This contact serves as a message or alarm output. During operation, an acoustic or visual signal may be activated or a consumer shut down. The contact is open as long as the device is currentless, and if there is an active message. Maximum switching capacity of 2A at 250V AC.
Terminal 40 (C):	Connection for voltage supply to the relay outputs terminals 41 to 45 The relays for the control outputs share the same connection to the supply voltage.
Terminals 41 (K1) to 45 (K5):	Relay contacts with potential These contacts are used as control outputs for the capacitor switching contactors. In a currentless state of the device, the contacts are opened for stages that are not hooked up. Maximum switching capacity of 2A at 250V AC
Terminals 51 (-) and 52 (+):	Temperature sensor input A temperature sensor, e.g. PT1000, can be connected to this input to measure the switchgear cabinet temperature. Temperature measuring range of - 20°C to 100°C +/- 2°C.
Terminal 90 (ground): 91 (A) 92 (B)	Interface connection For communication on the KBR eBus or Modbus

3 Commissioning guideline for the multicomp 4D6-ESB SDS-1V1C6RO

This guideline helps you to correctly commission the compensation controller **multicomp 4D6-ESB SDS-1V1C6RO**. It provides you with step by step instructions to help you find the options relevant for you in the operating instructions.

To begin with, there are two cases in which the commissioning procedure for the **multicomp 4D6-ESB SDS-1V1C6RO** differs.

Case 1: You have bought a complete compensation facility from KBR, and the controller is already mounted. If this is the case, certain settings are already preconfigured in the controller.

Case 2: You only bought the controller, or the controller with additional modules (multisio 2D2-4RO, multisio 2D2-1TI2RO, multisio 1D2-4CI) and individual capacitor stages, but the device is not assembled. In this case, the controller is delivered with the default settings (refer to chapter Default settings) and has thus not been pre-configured.

3.1 Controller not preconfigured

If a not yet preconfigured controller is to be commissioned, the following procedure has to be performed step by step.

1. Configuration of additional module (multisio 2D2-4RO, multisio 2D2-1TI2RO, multisio 1D2-4CI)

If there are no additional temperature, relay or induced current measuring modules, this step can be skipped. To configure additional modules, connect them and the supplied bus line to the basic module. The additional modules can then be activated individually using a scan mode, which has to be triggered via the basic module's operating panel and the DIP switches or scan buttons on the additional module. If the compensation facility consists of several cabinets, the correct cabinet assignment has to be set up. Detailed instructions for this step are given in chapter Settings under the item Module / display submenu.

2. Configuring current transformer values

For the compensation controller to function properly, all current transformer parameters have to be set correctly. Primary and secondary current of the transformer have to be set. These parameters can be read on the nameplate of the current transformer. In addition, the phase allocation of the transformer has to be set correctly. In the controller, the phase (L1, L2, L3) in which the current transformer is integrated has to be set. Detailed instructions for this step are given in chapter Transformer ratio. You can find more detailed information on this topic under chapter Commissioning under item submenu Transformer settings.

3. Setting target cosine

You can ask your energy supply company for the target cosine, which should be set up at this point. The target cosine is by default set to 0.95 inductive (see chapter Default settings). Detailed instructions for this step are given in chapter Set target cosine. You can find more detailed information on this topic under chapter Commissioning under item submenu Target cosine.

4. Configuring the capacitor stages

There are two ways of configuring the capacitor stages. The stages can be configured manually or using the auto configuration mode.

The most important setting to pay attention to is the stage power. The stage power can be looked up on the nameplate of the stage or the circuit diagram and then programmed manually. The auto configuration mode then automatically sets this value. However, it has to be confirmed and checked after each time the learning process is performed.

Detailed instructions for the auto configuration mode are given in chapter Extra → Commissioning → Stages → Stage → Auto configuration mode.

After the stage power has been configured, you have to set the reactor factor. This factor can be read on the circuit diagram cover sheet or the nameplate of the stage.

If the compensation facility consists of several cabinets, the cabinet assignment should be adjusted accordingly.

Detailed instructions for this step are given in chapter Commissioning under the item Stages submenu.

5. Function test

After all values have been programmed, a function test should be performed. To do so, the controller has to be taken off the voltage supply for a few seconds.

After re-connecting it to the voltage supply, the controller has to start automatically. If the $\cos\phi$ voltage is read out in the $\cos\phi$ act. menu immediately after switching it on, the value for $\cos\phi$ should be low and inductive.

After ca. 60 seconds, the controller starts to switch on the individual capacitor stages.

The $\cos\phi$ value displayed in the $\cos\phi$ act. menu should have risen in comparison with former values, or it should rise when switching on additional stages. If the compensation facility is set up correctly, the controller should compensate the set target cosine after a certain period of time.

3.2 Controller preconfigured

If a controller already integrated into a KBR compensation facility by default should be used, only the parameters of the current transformer have to be configured.

1. Configuring current transformer values

For the compensation controller to function properly, all current transformer parameters have to be set correctly. Primary and secondary current of the transformer have to be set. These parameters can be read on the nameplate of the current transformer. In addition, the phase allocation of the transformer has to be set correctly. In the controller, the phase (L1, L2, L3) in which the current transformer is integrated has to be set.

Detailed instructions for this step are given in chapter Transformer ratio. You can find more detailed information on this topic under chapter Commissioning under item submenu Transformer settings.

2. Function test

After all values have been programmed, a function test should be performed. To do so, the controller has to be taken off the voltage supply for a few seconds.

After re-connecting it to the voltage supply, the controller has to start automatically. If the $\cos\phi$ voltage is read out in the $\cos\phi$ act. menu immediately after switching it on, the actual value for $\cos\phi$ should be low and inductive. After ca. 60 seconds, the controller starts to switch on the individual capacitor stages.

The $\cos\phi$ value displayed in the $\cos\phi$ act. menu should have risen in comparison with former values, or it should rise when switching on additional stages. If the compensation facility is set up correctly, the controller should compensate the set target cosine after a certain period of time.

4 Funktionen des Reglers im Sicherheits- und Wartungskonzept secureC



Hinweis

Diese Funktionen sind nur mit dem Eigenstrom - Überwachungsmodul multisio 1D2-4CI gegeben!

4.1 Resonanzfrequenzüberwachung der Stufen

Für den weiteren Betrieb gesperrt wird eine Stufe nur dann, wenn sie durch Kapazitätsverlust in einen kritischen Bereich gerät (Resonanzfrequenz). Gekennzeichnet wird die Stufe im Display mit einem ✕.



Vorsicht

Entsperrt wird die Stufe im Menü Stufenverwaltung, Untermenü Modus.

Bei gesperrter Stufe (Kapazitätsverlust) darf nicht der Lernmodus aktiviert werden, sondern es muß der defekte Kondensator getauscht werden !!!

1. Bewertung der Resonanzfrequenz:

- a) Verdrosselung ist 5,5%, 7% oder 8% (5. Harmonische ist kritisch)
 Wenn die Resonanzfrequenz größer als 89% der 5. Harmonischen ist, dann ist die **Warnschwelle** überschritten.
 Wenn die Resonanzfrequenz größer als 93% der 5. Harmonischen ist, dann ist die **Alarmschwelle** überschritten.
- b) Verdrosselung ist 12,5%, oder 14% (3. Harmonische ist kritisch)
 Wenn die Resonanzfrequenz größer als 96% der 3. Harmonischen ist, dann ist die **Warnschwelle** überschritten.
 Wenn die Resonanzfrequenz größer als 97% der 3. Harmonischen ist, dann ist die **Alarmschwelle** überschritten.

Dabei wird beim Überschreiten der

Warnschwelle eine Meldung ausgegeben (E28 Kapazitätsverlust)
(Warnschwelle bei Eigenstrom um ca. 35% zu niedrig)

Alarmschwelle eine Meldung ausgegeben (E28 Kapazitätsverlust)
(Alarmschwelle bei Eigenstrom um ca. 45% zu niedrig)

Wird nach fünf weiteren Zuschaltversuchen immer noch Kapazitätsverlust festgestellt, wird die Stufe für erneute Zuschaltungen gesperrt und die Meldung **E30 Stufe gesperrt** ausgegeben.

4.2 Stromaufnahme- und Leistungsüberwachung der Stufen



Hinweis

Die Überwachung erfolgt nur beim Zuschalten oder Abschalten von Stufen!

Wenn eine Stufe durch die Eigenstromüberwachung als schadhaft (**E26 Kondensatorstrom zu hoch oder E28 Kapazitätsverlust (Kondensatorstrom zu niedrig)**) festgestellt wird, erfolgt am Display eine Meldung. Grenzbedingung hierfür ist das Stufenraster der gefertigten Stufen.

Die Fehlermeldung **E27 Sicherung prüfen** wird ausgegeben, wenn sich beim Zuschalten einer Stufe die Stromaufnahme der Anlage (des Schrankes, in dem gemessen wird) nicht ändert.

Ändert sich beim Abschalten einer Stufe der Wert nicht, wird die Meldung **E29 Schütz defekt (klebt)** ausgegeben.

4.3 Stromaufnahme- und Leistungsüberwachung kompletter Schränke

Die **Überwachung der Stromaufnahme** einzelner Schränke ist eine wichtige Sicherheitsfunktion.

Die Stromaufnahme wird mit einem Strommessmodul multisio 1D2-4CI und Eigenstromwandlern im Schrank gemessen. Jeder Schrank wird einzeln überwacht. Es wird eine zu hohe oder zu niedrige Stromaufnahme berücksichtigt.

Funktion bei zu hoher Stromaufnahme:

Es erfolgt eine permanente Überwachung, der Messabstand richtet sich nach der Anzahl der angeschlossenen Module (Abstand der Messungen 50 ms bis 500 ms).

Wird in einem Schrank eine zu hohe Stromaufnahme erkannt, werden die Stufen in diesem Schrank nach-einander abgeschaltet, bis entweder alle Stufen im Schrank abgeschaltet sind, oder die Stromaufnahme wieder im zulässigen Bereich ist.

Einstellungen:Die Einstellungen werden im Menü Extra => Einstellungen => System => Parameter => Grenzwerte => GW U => GW +Ie vorgenommen.

Einstellbar sind: Zulässige Überschreitung auf 110% bis 200% des Nennstromes
Überwachung der Überschreitung aktiv oder aus

Aktion bei Fehlerfall: Nur Störmelderelais schaltet
Nur Kompensationsstufen werden abgeschaltet
Störmelderelais schaltet und Kompensationsstufen werden abgeschaltet
Keine Aktion, nur Meldung über den KBR eBus

Außerdem wird im Fehlerfall am LC-Display eine Meldung ausgegeben.

Beispiel:

E31 GW Ie verletzt, Schrank Nr.: 2

Bei einer **3-phasigen** Eigenstromüberwachung wird für **jeden Schrank ein Strommessmodul** multisio 1D2-4CI benötigt.

Bei einer **1-phasigen** Eigenstromüberwachung können mit **einem Strommessmodul 4 Schränke** überwacht werden. Dabei entspricht die Schrankzuordnung des Strommessmoduls dem ersten Eingang des Strommessmoduls.

Beispiel:

Strommessmodul dem Schrank **1** zugeordnet:

Eingang 1 = Schrank 1
Eingang 2 = Schrank 2 usw.

Strommessmodul dem Schrank **2** zugeordnet:

Eingang 1 = Schrank 2
Eingang 2 = Schrank 3 usw.

4.4 Temperaturüberwachung der Stufen

Das Schaltverhalten der Stufen bei Übertemperatur hat folgenden Ablauf:

1.) Reduzierung der Schranktemperatur bei Überschreitung der Alarmschwelle (Voraussetzung: mind. 2 Schränke)

Bei Überschreitung der Alarmtemperatur wird nach einer Verzugszeit von 3 Minuten versucht, eine Stufe durch eine gleichwertige (gleiche Stufenleistung, gleiche Verdrosselung und gleiche Type (Thyro / Schütz)) aus einem Schrank mit geringerer Temperatur zu ersetzen. Nach einer weiteren Verzugszeit von 3 Minuten wird versucht, die nächste Stufe zu ersetzen.

Unterschreitet die Schranktemperatur die Alarmtemperatur (Hystereseschwelle noch nicht unterschritten), so wird keine Stufe mehr ersetzt. (Hysterese wirkt hier nicht!)

2.) Temperatur als Auswahlkriterium beim Zu- oder Abschalten von Stufen

Wenn in einem Schrank die **Alarmtemperatur** überschritten wurde, dann wird die Temperatur als Kriterium bei der Auswahl der zu schaltenden Stufe mit verwendet.

Wenn Stufen mit gleicher Stufenleistung und gleicher Verdrosselung zu Auswahl stehen, dann wird beim **Abschalten** die Stufe mit der höheren Schranktemperatur bevorzugt.

Beim **Zuschalten** wird die Stufe mit der geringeren Schranktemperatur bevorzugt.

Die Temperatur wird als Auswahlkriterium nur bei Überschreitung der Alarmtemperatur verwendet, da sonst die „Kreisschaltung“ der Stufen nicht mehr greift.

3.) Notabschaltung

Bei Überschreitung der **Abschalttemperatur** wird zunächst nur eine Stufe abgeschaltet. Erst nach einer Verzugszeit von 2 Minuten wird die nächste Stufe abgeschaltet.

Unterschreitet die Temperatur die Abschalttemperatur (Hysterese noch nicht unterschritten) so werden keine Stufen mehr abgeschaltet. Es werden aber auch keine Stufen in diesem Schrank zugeschaltet, solange die Hysteresetemperatur nicht unterschritten wurde.

Sobald die Hysteresetemperatur unterschritten wird, werden die Stufen in diesem Schrank zur Kompensation wieder freigegeben.


Die Werkseinstellungen sind:

Schaltschwelle Lüfter	= 28°C / Hysterese = 5°C
Schaltschwelle Alarm	= 45°C / Hysterese = 5°C
Schaltschwelle Übertemperatur	= 48°C / Hysterese = 5°C

Das bedeutet, daß der Lüfter bei Überschreiten von 28°C einschaltet und bei Unterschreiten von 23°C wieder abschaltet. Der Übertemperaturalarm wird bei Überschreiten von 45°C ausgelöst und bei Unterschreiten von 40°C wieder zurückgesetzt. Die Übertemperatur-Stufenabschaltung setzt bei Überschreiten von 48°C ein. Nach Absinken der Temperatur unter 43°C werden die Stufen nach Ablauf der Entladezeit im Bedarfsfalle wieder zugeschaltet.

Die Übertemperatur-Abschaltungen der einzelnen Stufen werden aufaddiert, so daß nachträglich festgestellt werden kann, ob und in welchem Schrank Temperaturprobleme vorliegen.

5 Operating and display panel

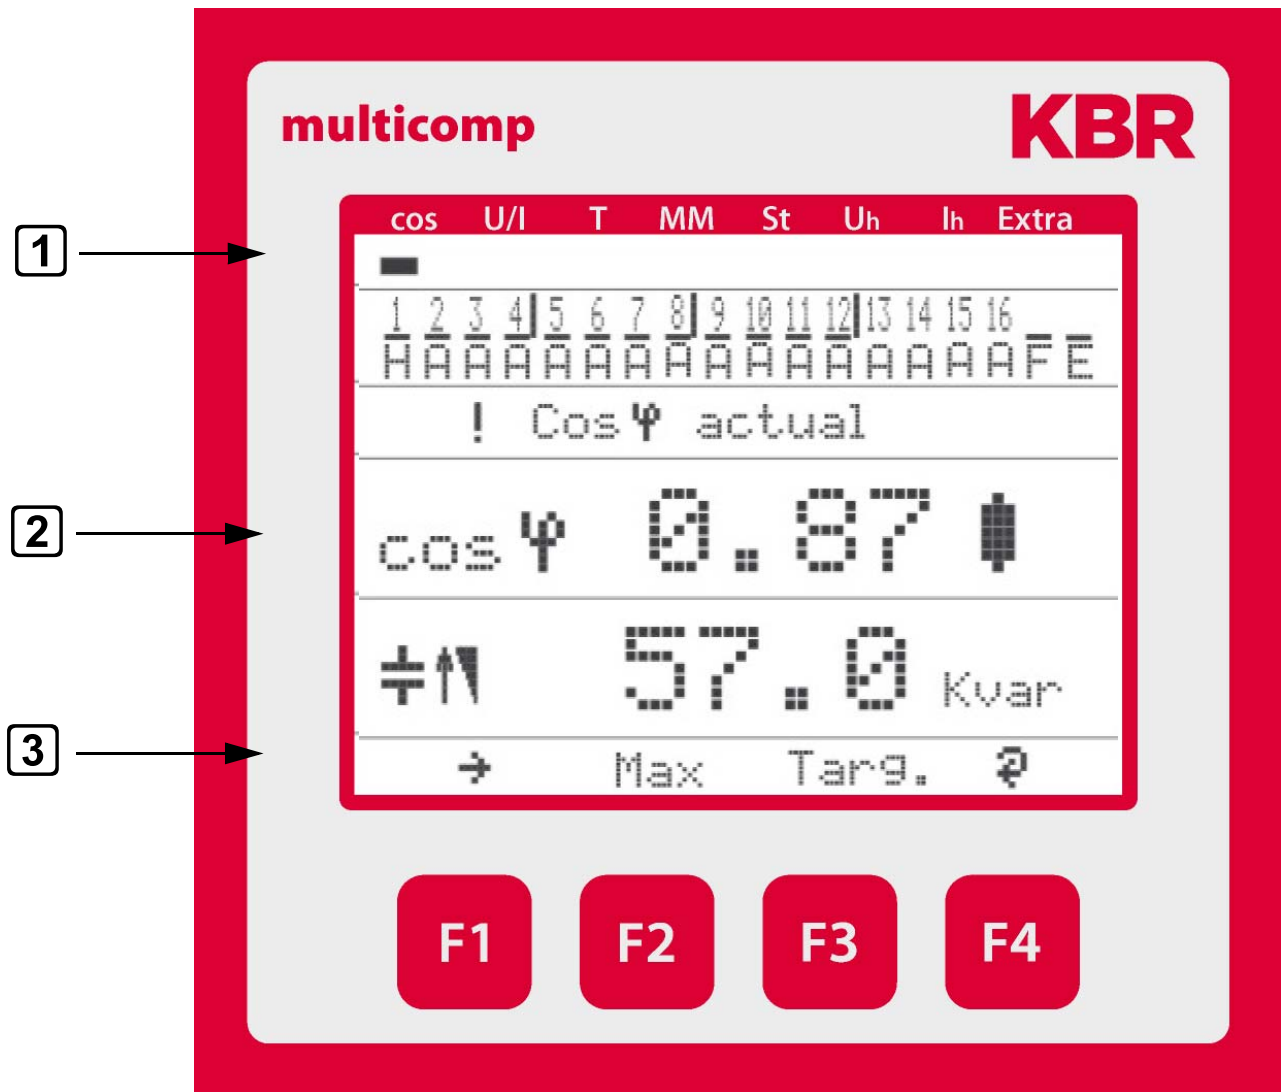

5.1 Description of buttons

▶ **1 Navigation panel of display**

The navigation panel shows the main menu selected, notably simplifying operation of the device.
The operator can see immediately which menu he is in.


▶ **2 Units display**

The DOT matrix display is normally used to show measured values.
In some submenus, this display area is used to show additional information to assist operation.

▶ **3 Hot key area**


The text line corresponds to the function keys lying below it and is used to issue messages and text. The interaction of key and accompanying display enables a very convenient operation which is self-explanatory.


5.2 Navigation and device displays

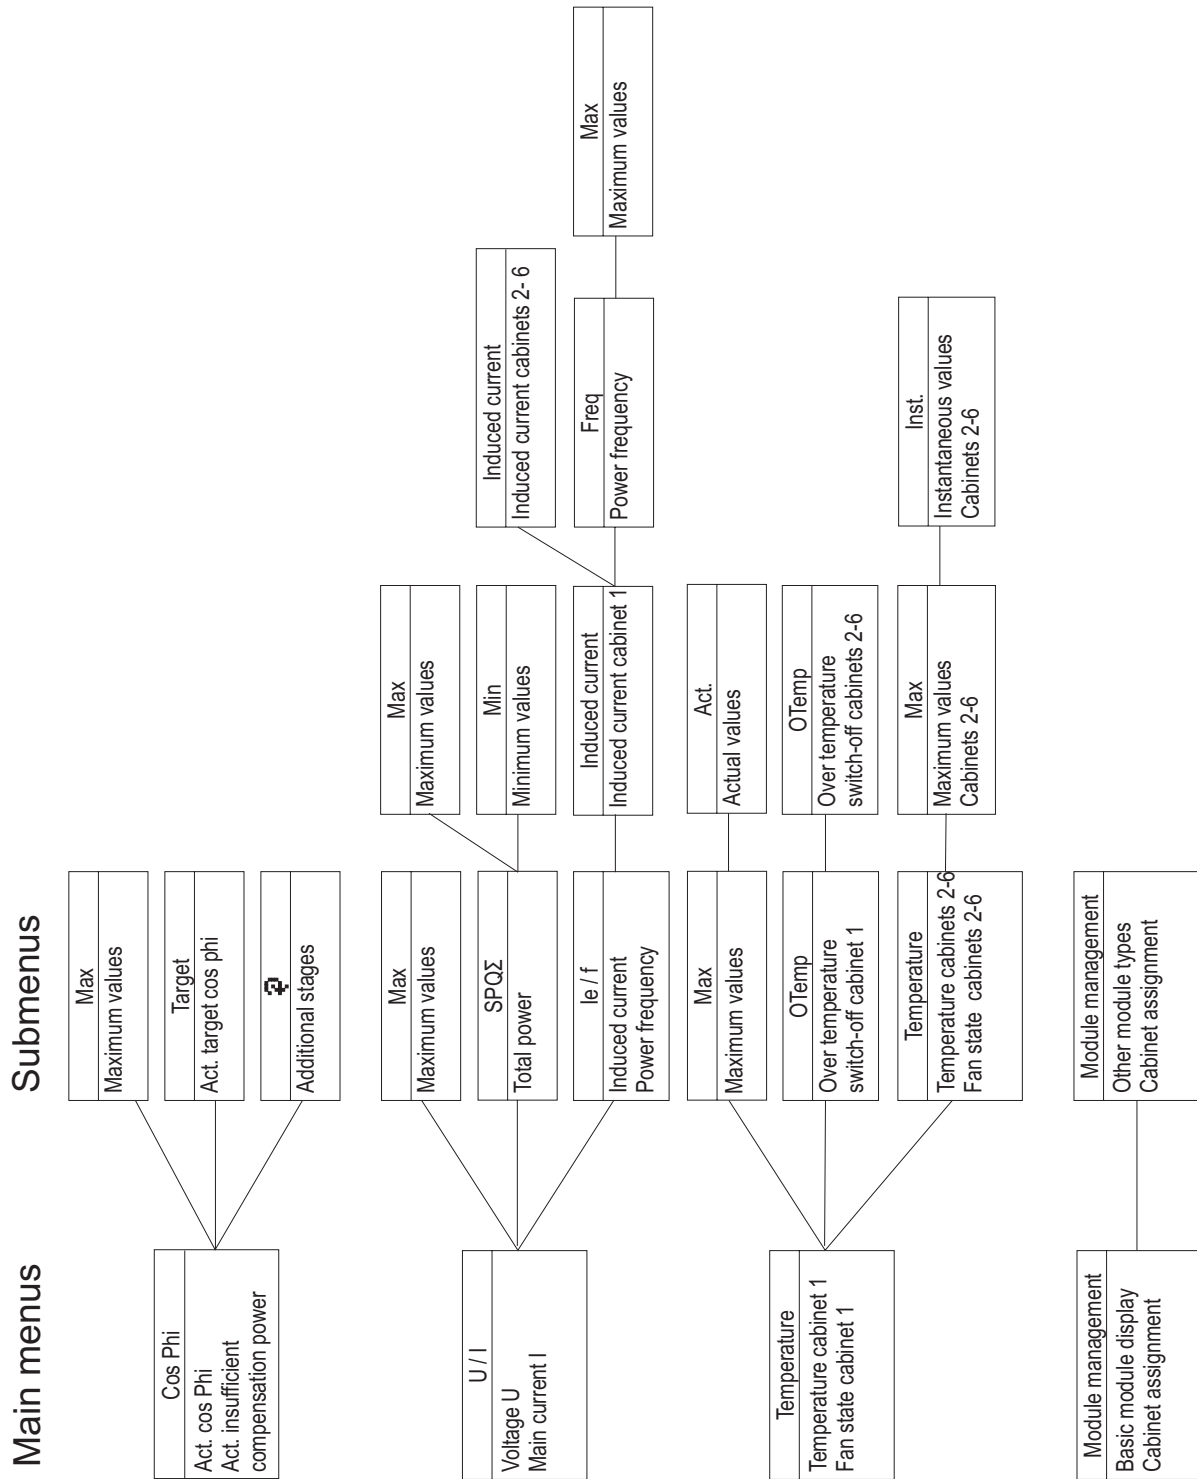


Submenus

Main menus

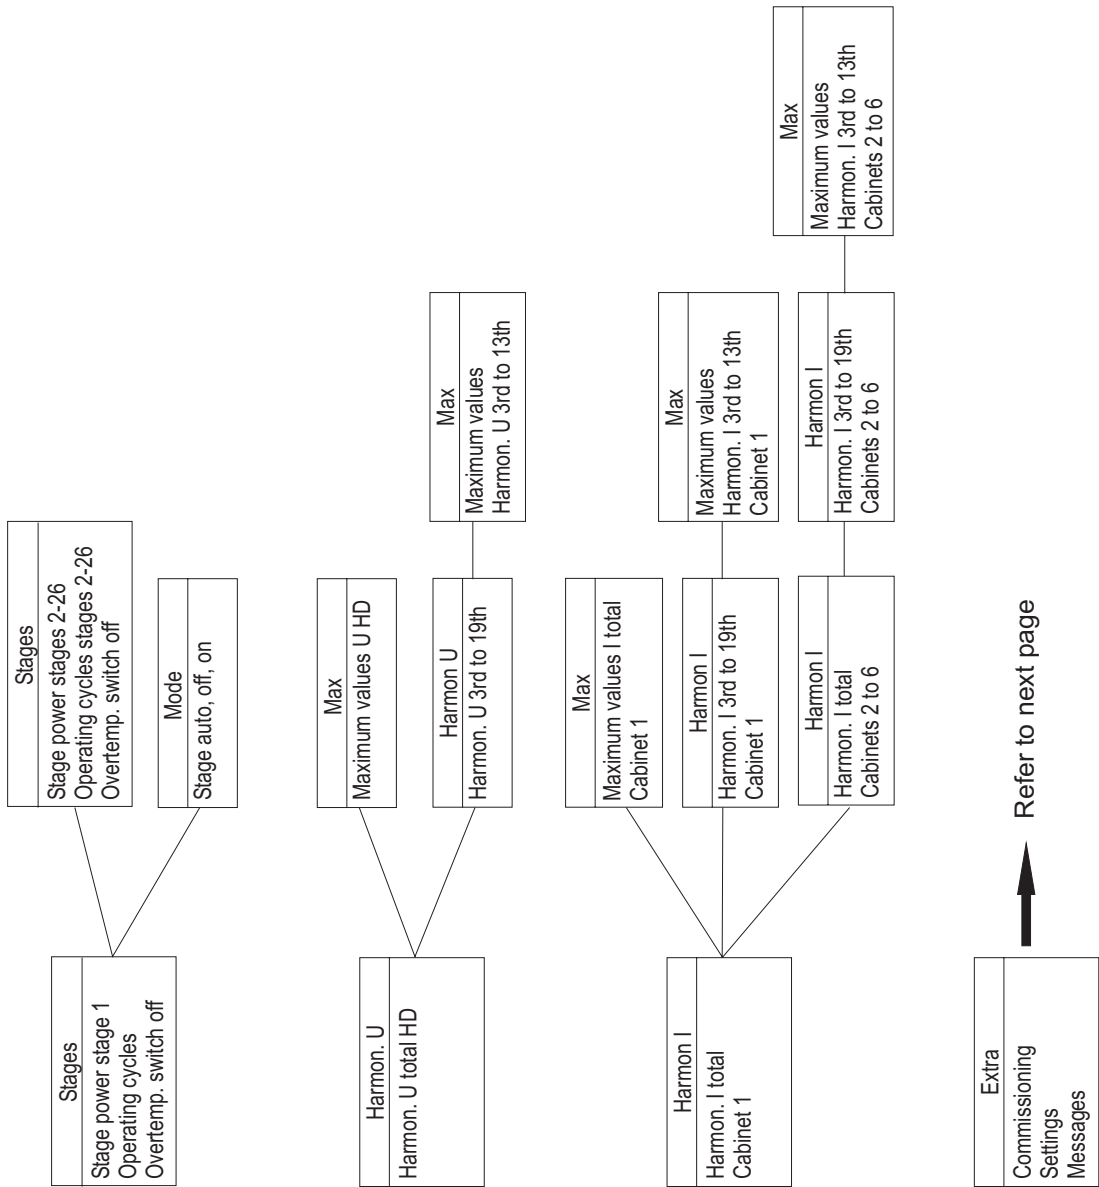

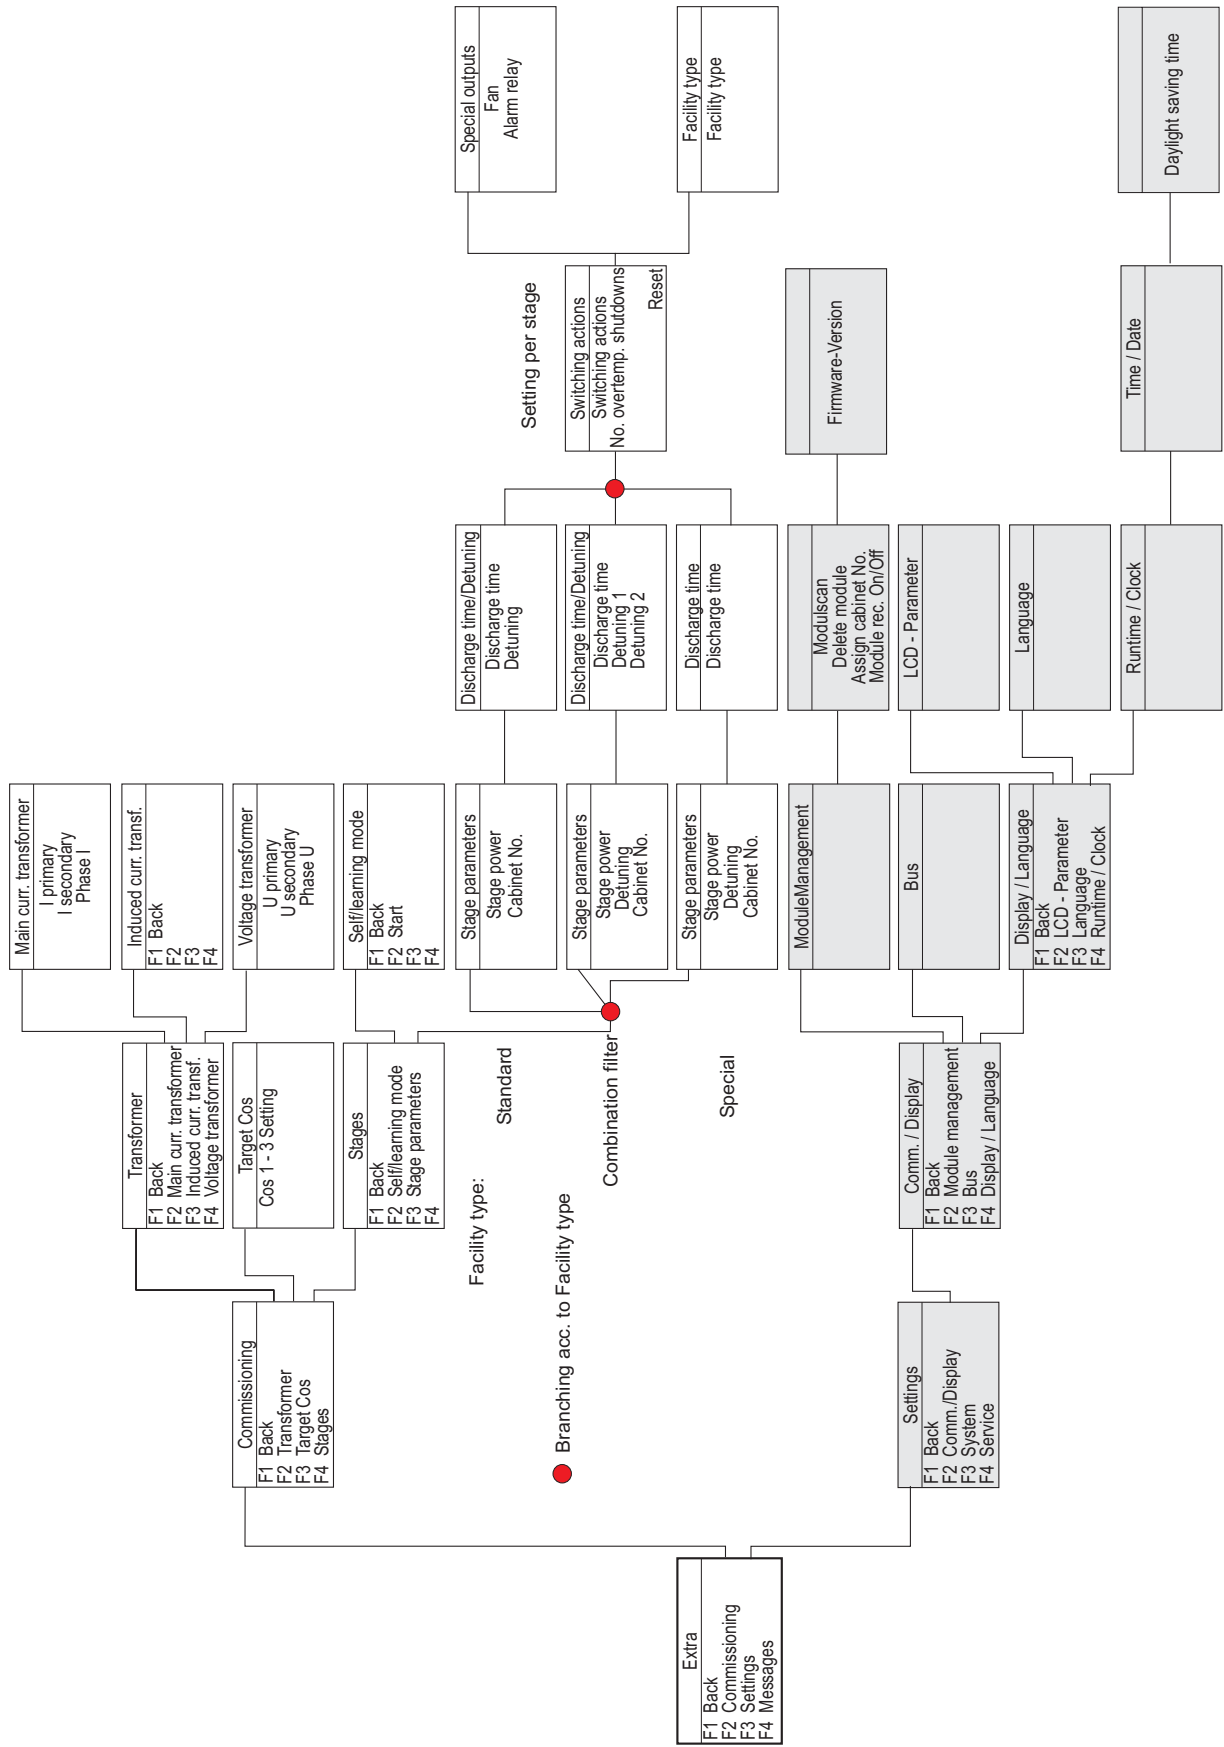


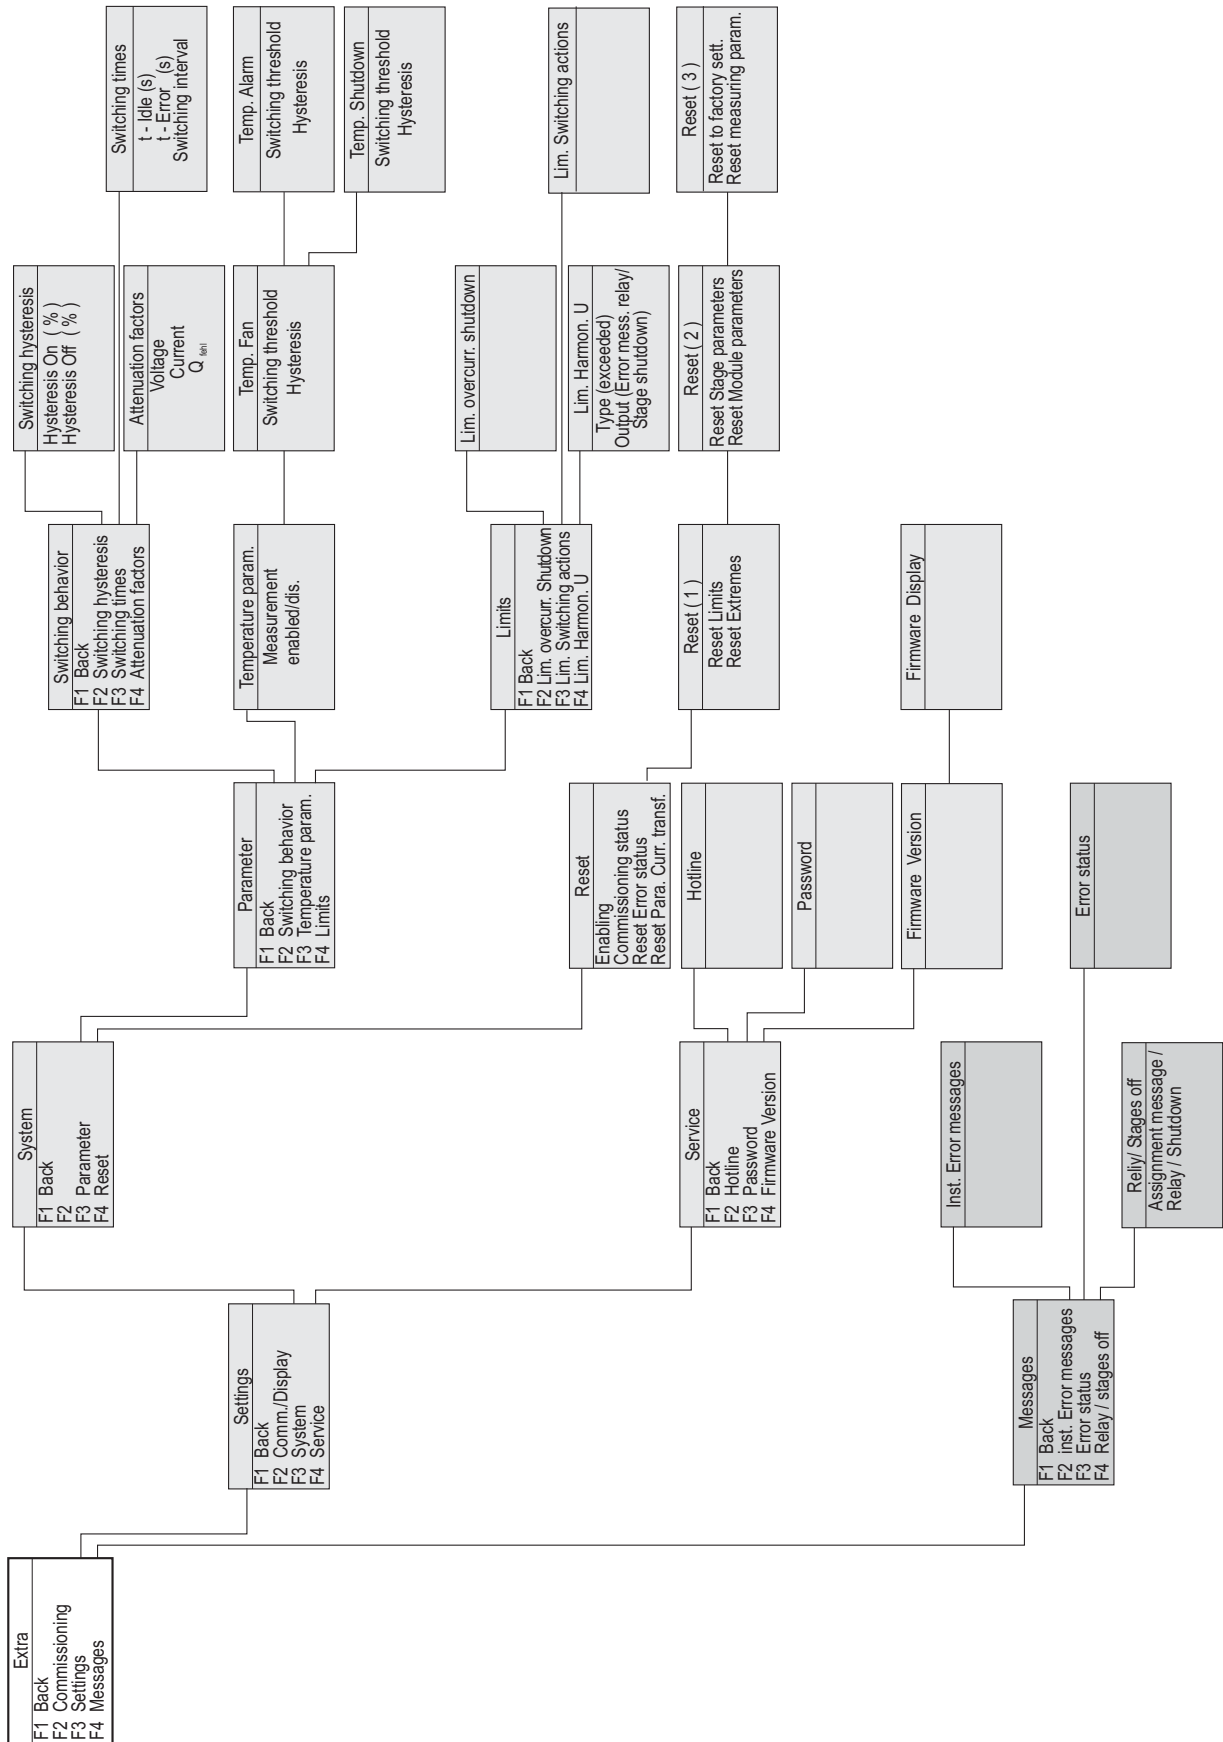

















5.3 Definition of terms

The following signs and abbreviations will be used in the display:

	Star voltage
	Delta voltage
	Inductive
	Capacitive
	Switch on
	Switch off
	Scroll through main menu or submenu
	Return
	Submenu or parameter selection
	Enter value
	Selection
	Energy recovery (generator operation)
	Attention Message
	Edit
	Switching (make or break)
	Maximum value
	Minimum value
cos φ	Active power factor
cosPhi	Active power factor
Max	Display and processing for maximum values
Mon	Display for actual values
Para	Return for configuration
EDIT	Perform configuration
Freq.	Power frequency
U Ph-n	Voltage phase / neutral conductor
I Ph-n	Current phase / neutral conductor
PΣ	Active power – total (three-phase)
PQS Σ	Active power / reactive power / apparent power - total (three-phase)
Lim	Limit
DC	Damping coefficient
Module	Module management
YES	Confirmation to save configuration
NO	Discard configuration
SCAN	Scan mode (search mode) for module search and KBR eBus address assignment
Modus	Switching mode of stages
Harm. U	Voltage harmonics (distortion factor)
Harm. I	Current harmonics (distortion current intensity)
Firmware	Operating system software of basic device or of display module
Setup	Device configuration
Mess.	Error messages and error state
Displ.	Operating system of display module
Basic Para.	Basic parameters (submenus)
IIIU	Measuring voltage transformer prim./sec.
IIIC	Series transformer prim./sec.

Learn	Learning function stage power
Bus	Bus parameters
LCD	LCD parameters (display mode)
Dfact	Damping coefficient (switching interval stages)
Lan.	Language of text display (display module)
Code	Password protection
Reset	Reset function extreme values and configuration
Temp	Enable temperature measurement
Serv	Customer service address

Operating messages for individual switching stages:

1	= switching stage number
	= stage is switched off
A	= in automatic operation mode

1	= switching stage number
-	= stage is switched on
A	= in automatic operation mode

1	= switching stage number
	= stage is switched off
0	= in manual operation

1	= switching stage number
-	= stage is switched on
H	= in manual operation

1	= switching stage number
	= stage is switched off
X	= and not available

1	= switching stage number
	= stage is switched off
	= and no stage power programmed

	= no compensation stage (other mode)
	= switched off
F	= fan

	= no compensation stage (other mode)
-	= switched on
F	= fan

	= no compensation stage (other mode)
	= not switched (no fault)
E	= alarm relay

	= no compensation stage (other mode)
-	= switched, i.e. fault exists
E	= alarm relay

Settings:

Damping (DC)	= Reduction of the display fluctuations, the measuring cycle of the controller is not influenced.
Idle time (t idle)	= Starts at compensation, after the idle time has expired the next switching action follows.
Alarm delay (t-alarm)	= Concerns the FTS message (facility too small), i.e. all stages are hooked up, but the set alarm-CosPhi is not reached. After the set time has expired an alarm message is issued.
Hysteresis (Hyst.)	= Refers to the smallest available stage power und the over or undercompensation, i.e. the hooking up or switching off starts at the percentage set.
Switch damping	= The time set defines the interval between two switching actions.
Operating cycle limit	= When the set value is reached a message is issued. The value is based on the details from the contactor manufacturer.
Switch-off threshold (Lim-U)	= Overvoltage switch-off to protect the facility, i.e. switching off the stages starts when the set limiting value is exceeded (hysteresis = 1% of the measurement voltage)
Abschaltschwelle GW Ie	= Überstromgrenzwert bei Eigenstrommessung

5.4 Einstellbereiche der programmierbaren Parameter

Primärspannung	1 V bis 9999 kV Ph-Ph
Sekundärspannung	100 V bis 500 V Ph-Ph
Primärstrom	1 A bis 99,99 kA
Sekundärstrom	1 und 5 A
Drehfeld U	L1N, L2N, L3N, L12, L23, L31
Drehfeld I	L1, L2, L3, -L1, -L2, -L3
Bezug Ziel-Cosfind.	0,80 bis kap. 0,80
Abgabe Ziel-Cosfind.	0,80 bis kap. 0,80
AZK Alarm-Cosfind.	0,50 bis kap. 0,50
Dämpfungsfaktor Strom	0 bis 6
Dämpfungsfaktor Spannung	0 bis 6
Dämpfungsfaktor Qfehl	0 bis 6
Ruhezeit	0 bis 300 Sek.
Störmeldezeit	0 bis 3000 Sek.
Hysterese Zuschaltung	70 bis 150 %
Hysterese Abschaltung	70 bis 150 %
Schaltabstand	0 bis 10 Sek.
Grenzwert Schaltspiele	0 bis 99990
Schrank-Nr.	1 bis 6
Stufenleistung	0 bis 999,9 kvar induktiv oder kapazitiv
Entladezeit	0, 3, 30, 60, 90, 300, 600, 900 Sek.
Verdrosselung	0, 5.5, 7, 8, 12.5, 14 %
Stufenschaltmodus	Automatik, Hand aus, Hand ein
Oberwellenüberwachung	0 bis 99%, deaktivierbar
Überspannungsabschaltung	abhängig von der Primärspannung
Überstromabschaltung	110% bis 200%
Grenzwert THD	0 bis 10%
Schaltschwelle Lüfter	0 bis 70°C / Hysterese = 0°C bis 25°C
Schaltschwelle Alarm	0 bis 70°C / Hysterese = 0°C bis 25°C
Schaltschwelle Übertemperatur	0 bis 70°C / Hysterese = 0°C bis 25°C
Abtastfrequenz	Automatisch, fest 50 Hz, fest 60 Hz
Passwort	kein Passwort (9999, d. h. alle Funktionen sind frei zugänglich)
Sprachanzeige	Deutsch, Englisch
Kontrasteinstellung	60% bis 100%


5.5 Device programming

The menu navigation of the **multcomp 4D6-ESB SDS-1V1C6RO** is self-explanatory. The user is guided and supported by the device through operating hints on the display for that particular situation. The following terms are available for programming:

Para	Return for configuration
EDIT	Perform configuration
+	Submenu or parameter selection
+	Enter value
?	Selection
YES	Confirmation to save configuration
NO	Discard configuration
↵	Return

5.6 Start menu Commissioning

If the **multcomp 4D6-ESB SDS-1V1C6RO** is being **commissioned for the first time**, after setting up the supply voltage for the **multcomp 4D6-ESB SDS-1V1C6RO** the menu **Extras / Commissioning** is displayed as the start screen (after the initialization phase):

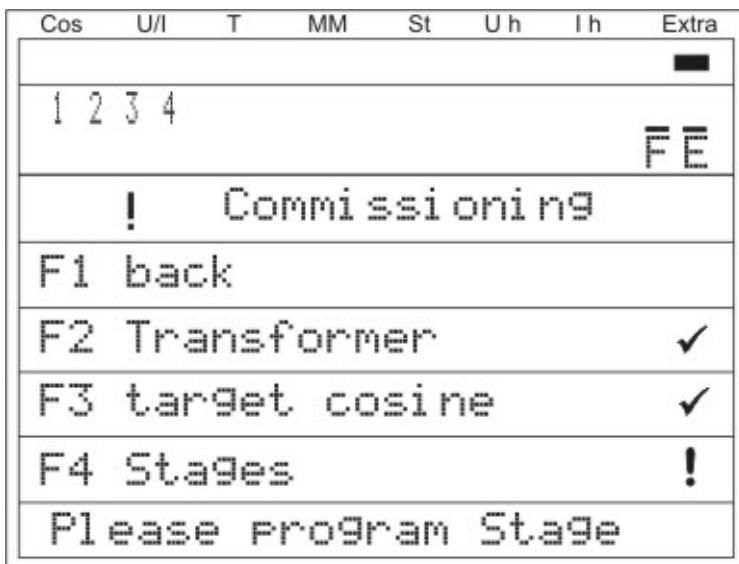


This display is used for the **Initial commissioning** of the controller, where all the necessary settings can be made.



Note

Detailliert beschrieben werden diese Einstellungen unter dem Menüpunkt Extras / Inbetriebnahme

5.7 Main menu Cos φ

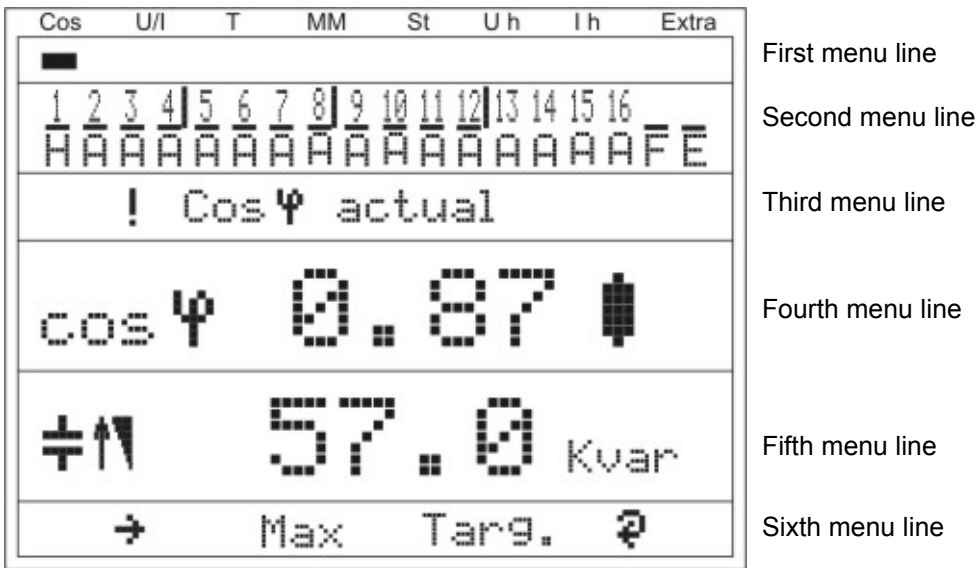

The display is divided into various menu lines. The number of lines depends on which main or submenu item is selected:

- First menu line: Shows which of the eight main menus is being displayed
- Second menu line: Status display of the output lines
- Third menu line: Description of the menu and messages currently displayed
- Fourth and fifth menu lines: Value display for the current menu
- Sixth menu line: Navigation in the menu displayed

cos φ Actual Menu description

F1	F2	F3	F4	
→	Max	Targ.	?	Display hot-key area
				Continue with additional stages
				Display of the actual target-cosφ
				Display of the maximum value of the missing compensated power
Scroll through main menu				

Display as example:

- Main menu = cosφ actual
- Stage mode: = Stage 1 handswitch on
Stages 2 to 12 Automatic mode On
Stages 13 to 16 Automatic mode Off
- Fan: = On
- Alarm relay: = On
- Alarm message: = exists (!)
- Menu description: = cosφ actual
- Measured cosφ: = 0.87 inductive
- Switching on / off: = Switch on, since capacitor power is missing
- Missing compensated power: = 57.0 kvar
- Additional modules = exists (?)

By pressing the button **F2** , you can display the **maximum value of the missing compensation power**. The value is displayed in kvar, with time and date stamp. The value is only displayed if all available stages are switched on and the configured alarm CosPhi is not reached when the set alarm delay time has elapsed. The respective value is a maximum value (maximum indicator function) accumulated during the alarm delay time.


As soon as the value is entered, the status message **E12 Facility too small** is displayed in the Messages sub-menu with a **time stamp and kvar specification**.



Note

The value displayed here is a mean value of the set alarm delay time. I.e. this value and the maximum value of the missing compensation power can be different.

By pressing the **F4** (⊗) button, the following is displayed:

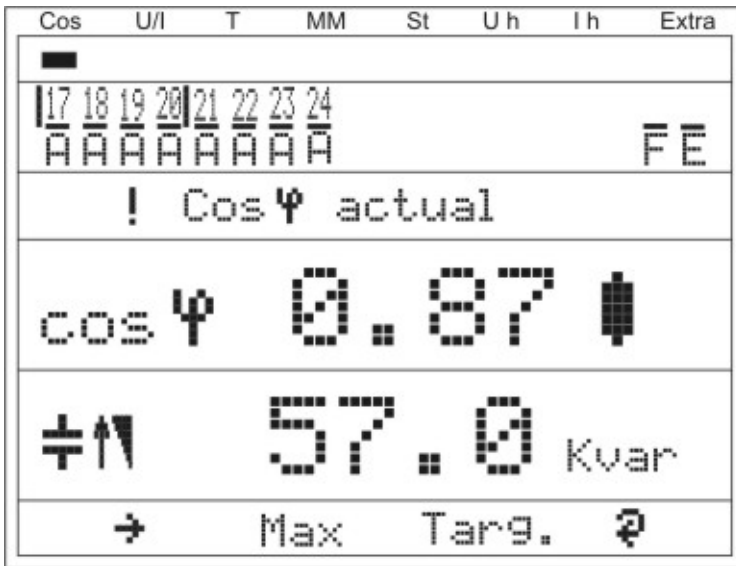

Display as example:


- Main menu = cosφ actual
- Stage mode: = Stages 17 to 24 Automatic mode On
- Fan: = On
- Alarm relay: = On
- Alarm message: = exists (!)
- Menu description: = cosφ actual
- Measured cosφ: = 0.87 inductive
- Switching on / off: = Switch on, since capacitor power is missing
- Missing compensation power: = 57.0 kvar



Note

This window is only displayed if more than three additional relay modules are scanned (which can be seen from the button designation (⊗) over **F4**)

5.8 Main menu Voltage / Current

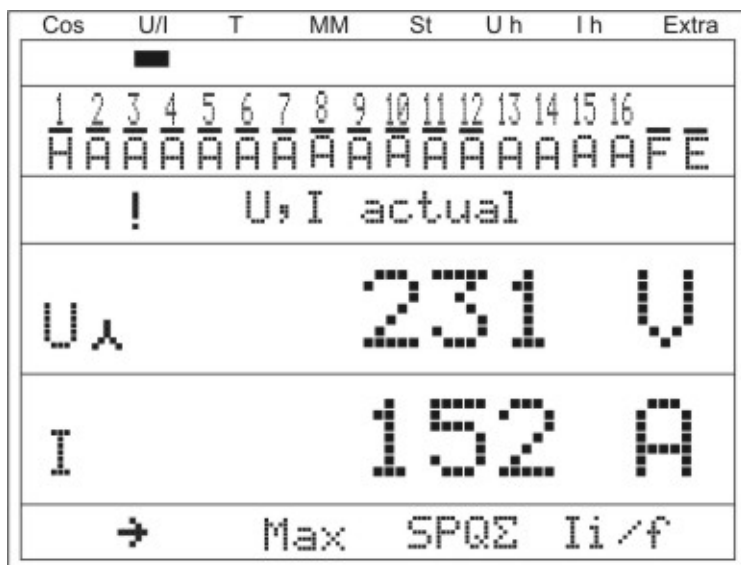

U, I Actual

Menu description

F1

→

F2

Max

F3

SPQΣ

F4

Ii/f

Display hot-key area

|

|

|

|

|

|

|

Display induced current, power frequency, maximum value

|

|

Totals for three-phase apparent, active, reactive power, minimum and maximum values

|

Display and processing for U/I maximum value


Scroll through main menu

Display as example:

Phase voltage = 231 V

Apparent current monophase = 152 A

5.9 Main menu temperature

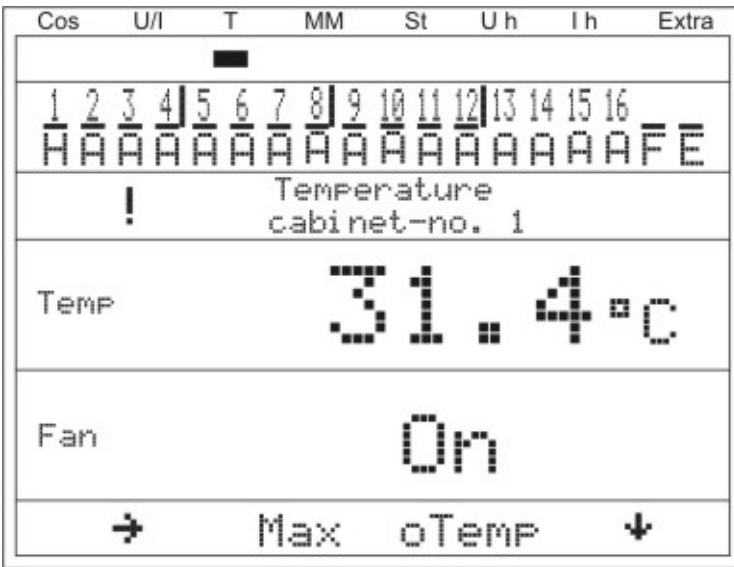

Temperature
Cabinet No. 1

Menu description

F1

→

F2

Max

F3

oTEMP

F4

↓

Display hot-key area

|

|

|

|

|

|

|

Submenu Temperature modules 1 to 3

|

|

Display of overtemperature switch-offs, sorted by cabinet

|


Display and processing for maximum values, sorted by cabinet

Scroll through main menu

Display as example:

Cabinet No.: = 1
 measured temperature: = 31.4 °C
 Fan status: = switched on

5.10 Main menu Module - Management

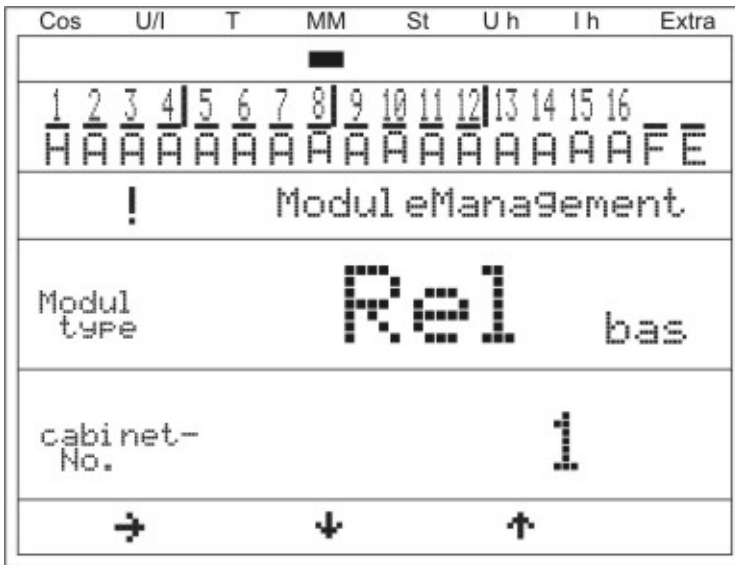

Module management

Menu description

F1

→

|

|

|

|

F2

↓

|

|

|

|

F3

↑

|

|

|

|

F4

Display hot-key area

Additional module - Display descending

Additional module - Display ascending


Scroll through main menu

Display as example:

Module: = Temperature module controller (basic module)

Cabinet assignment: = fitted in cabinet No. 1

5.11 Main menu Stages

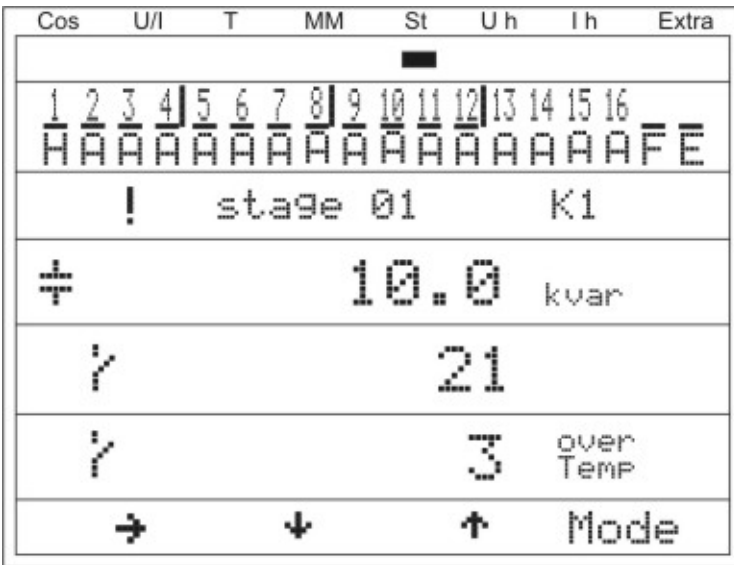

Stage parameters

Menu description

F1

→

F2

↓

F3

↑

F4

Mode

Display hot-key area

|

|

|

|

Set switch mode of stages (On, Off, Automatic mode)

|

|

Additional stages - Display descending

|

Additional stages - Display ascending

Scroll through main menu

Display as example:

Stages No. and connection terminal:

= Stage 01, terminal K1 at the basic module (for the 1st additional module the description would be terminal M1K1)

Stage type:

= Capacitor stage

Stage power:

= 10 kvar

Operating cycles:

= 21

Overtemperature switch-offs:

= 3

5.11.1 Submenu Mode

Stage 01				Menu description
F1	F2	F3	F4	
↶	↓	↑	EDIT	Display hot-key area
				Editing (On, Off, Automatic mode)
				Additional stages - Display descending
				Additional stages - Display ascending
Return				

Parameter mode: = Manual on, Manual off, Automatic mode
 Special mode: = Locked




Note

Due to the monitoring of the stage resonance frequency, it is possible to use the Locking mode.

If the stage is locked (capacitance loss), do NOT activate the learning mode but exchange the defective capacitor!!!

Beschreibung der Resonanzfrequenzüberwachung siehe Abschnitt "Funktionen des Reglers im Sicherheits- und Wartungskonzept secureC"

5.12 Main menu Uh distortion factor for voltage

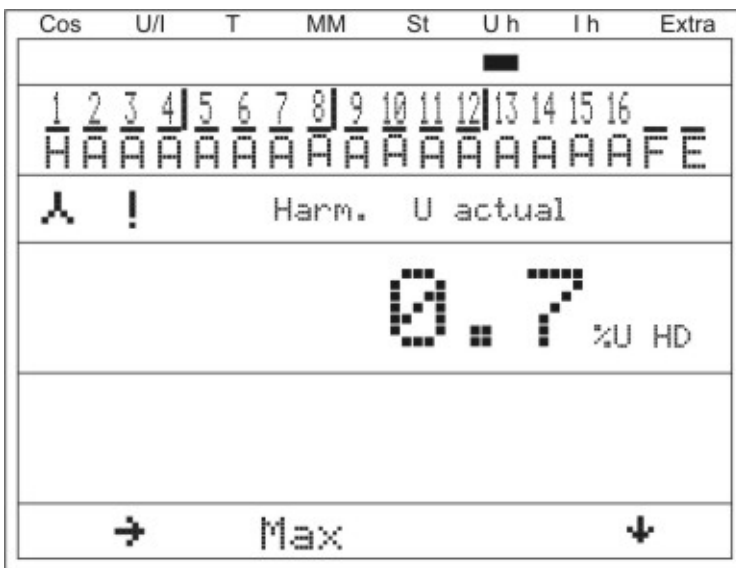

Display as example:

Total - harmonics of measuring voltage: = 0,7%.

Harm. U actual

Menu description

F1

→

F2

Max

F3

F4

↓

Display hot-key area

|

|

|

Continue to the 3rd and up to the 19th harmonic

|


|

|

Maximum

Scroll through main menu

5.13 Main menu Ih distortion current intensity

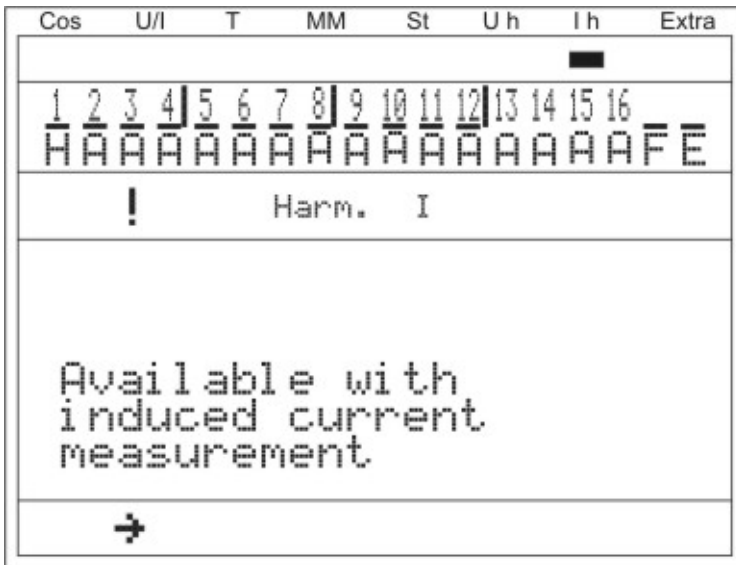

Harm. I

Menu description

F1

F2

F3

F4

→

Display hot-key area

|
|
|
|

Scroll through main menu




Note


This menu is only available for induced current measurement (has to be activated in the menu Commissioning → Transformer → Induced current transformer → Para).

Please check whether the induced current measurement module has already been scanned.

In case an induced current measurement is activated (e.g. **monophase** induced current measurement), the following window appears:

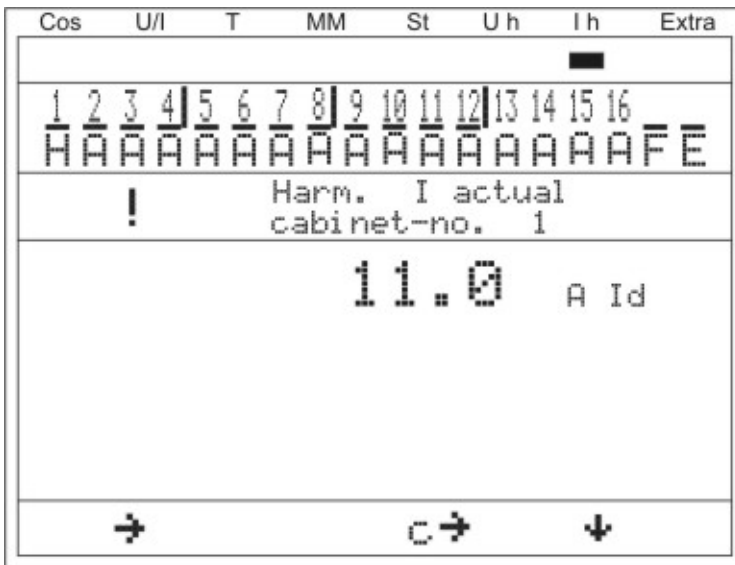

In case of a **three-phase** induced current measurement, the following window is displayed:

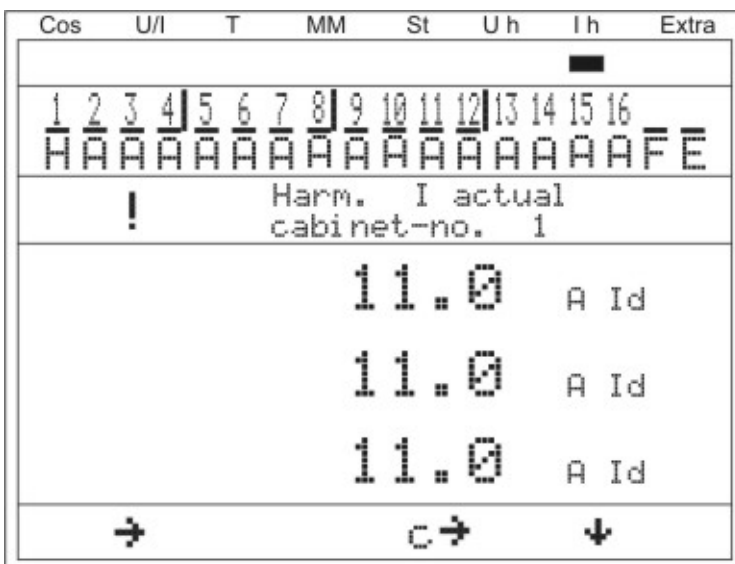

Harm. I mom

Menu description

F1	F2	F3	F4	
→		C →	←	Display hot-key area
				Continue to the 3rd and until the 19th harmonic
				Harmonics display for induced current measurement of next cabinet
				Scroll through main menu

Display as example:

Cabinet No.: = 1
 Induced current measurement: = three-phase
 Harmonic: = total Id
 Harmonic currents L1: = 11 A
 Harmonic currents L2: = 11 A
 Harmonic currents L3: = 11 A

5.14 Main menu Extras



Extras

Menu description

F1	F2	F3	F4	
→	Comm.	Sett.	Mess.	Display hot-key area
				Display message (! = message exists)
				Settings communication / display, system, service
				Commissioning parameters
				Scroll through main menu



Note

Before commissioning is performed it has to be ensured that all available additional modules have been scanned!

The **Commissioning** submenu contains the following items:

1. Transformer settings (current, induced current, voltage)
 - a. Series transformer
 - i. Primary current
 - ii. Secondary current
 - iii. Phase allocation
 - b. Induced current transformer
 - i. Activate, monophase or three-phase
 - ii. Primary current cabinet 1
 - iii. Secondary current cabinet 1
 - iv. Continue with cabinets 2 to 6
 - c. Voltage transformer
 - i. Primary voltage
 - ii. Secondary voltage
 - iii. Phase allocation
2. $\cos\varphi$ - Settings
 - a. Target $\cos\varphi$ for power consumption
 - b. Target $\cos\varphi$ for power recovery
 - c. Alarm $\cos\varphi$ for FTS message (facility too small)
3. Stages - Settings
 - a. Auto configuration mode
 - b. Stage parameter
 - i. Stage power
 - ii. Cabinet No.
 - iii. Discharge time
 - iv. Detuning / reactor factor
 - v. Operating cycles
 - vi. Overtemperature switch-offs
 - vii. Facility type
 - viii. Special outputs fans / alarm relays
 - c. Nominal value (rated voltage Ph-Ph, power frequency)

The **Settings** submenu contains the following items:

1. Modules / Display
2. System
3. Service

The **Messages** submenu contains the following items:

1. Active error messages
2. Error state
3. Allocation for message
 - a. Alarm relay
 - b. Stage switch-off

5.14.1 Commissioning

Commissioning				Menu description
F1	F2	F3	F4	Display hot-key area
4	IC	Cos.	Stage	
			Stages - Settings	
		cosφ - Settings		
	Transformer settings current / voltage			
Return				

5.14.1.1 Submenu Transformer settings

The Transformer settings submenu contains the following items:

1. Series transformer
2. Induced current transformer
3. Voltage transformer

Under the item **Series transformer** the primary and secondary current, as well as phase allocation must be specified.

Under the item **Induced current transformer** the primary and secondary current of the induced current transformer must be specified. These settings have to be made for **each cabinet individually!**

Under the item **Voltage transformer** the primary and secondary current, as well as phase allocation of the measurement voltage must be specified.

The series transformer submenu contains the following items:

1. Primary current
2. Secondary current
3. Phase allocation of principal current

For the items **Primary current** and **Secondary current** the respective parameter for the current transformer must be given, e.g. transformer 1000/5A means a primary current of 1000A and a secondary current of 5A. The input field ranges from 1A to 99.99kA for a primary current and 1A or 5A for the secondary current.

For the Phase allocation of the series transformer the phase must be specified that is measured in the principal current, e.g. phase I = L1. For a false polarity transformer connection the input can be given as phase I = -L1 (the minus sign means k and l are exchanged).

The voltage transformer submenu contains the following items:

1. Primary voltage
2. Secondary voltage
3. Phase allocation of measurement voltage
4. Zero-point creator

For the items **Primary voltage** and **Secondary voltage** the respective parameter for the voltage transformer must be given, e.g. transformer 10,000/100V means a primary voltage of 10,000V and a secondary voltage of 100V.

The input field ranges from 1V to 9,999kV for the primary voltage and 100V or 500V for the secondary voltage.

Under the item **Phase allocation of measuring voltage** the phase that is taken from the measurement voltage must be given, e.g. phase U = L1N. For a phase/phase measurement the entry would be L23, for instance.

Using the item **Zero-point creator**, the controller can be activated via a zero point creator.

For energy supply networks with outer conductor connected to the earth potential, suitable control gear with electrical isolation (e.g. voltage transformer) must be used.

These transducer adaptors (zero-point creator) are suitable for creating a virtual low-impedance neutral point for the measuring device in a three-phase network without neutral conductor.

In the 700 V variant, this also serves to adapt the measurement voltage to the measuring device.

Make sure that the measuring devices are configured for the operation with a zero-point creator.

Transformers are available in the following variants:

Variant 400/100: Primary:400 V phase to phase voltage
 Secondary:100 V phase to phase voltage


Variant 700/100: Primary:700 V phase to phase voltage
 Secondary:100 V phase to phase voltage

5.14.1.2 Submenu **Target cosine**

The target cosine submenu contains the following items:

1. Target $\cos\phi$ for power consumption
2. Target $\cos\phi$ for power recovery
3. Alarm $\cos\phi$ (message when Alarm $\cos\phi$ is not reached after set alarm delay time has elapsed)

For the items **Target $\cos\phi$ for power consumption** and **Target $\cos\phi$ for power output** a value from inductive 0.80 to capacitive 0.80 can be entered.

If active power recovery is detected, this is signaled by the  symbol in the display.

Under the item **Alarm $\cos\phi$** a value of inductive 0.50 to capacitive 0.50 can be entered.

5.14.1.3 Submenu Stages

The Stages submenu contains the following items:

1. Auto configuration mode
2. Stage parameters direct input
3. Nominal values

At initial commissioning, the following window is displayed in the stage overview (item 2. Stage parameters direct input):

Cos	U/l	T	MM	St	U h	I h	Extra
	St	CMK	Q \neq				td
	1	1-1	0		7		60
	2	1-2	0		7		60
	3	1-3	0		7		60
	4	1-4	0		7		60
	-	1-5	Fan				
	-	--6	Error				
	5	-11	--		--		--
	5	-11	--		--		--
	5	-11	--		--		--
			kvar		%		sec.
	←		↓		↑		Para

Under the item Auto configuration mode, you can start automatic monitoring of the connected capacitor stages under the menu item Extra Commissioning → Stages → Auto configuration mode → Start.

First, the configured parameters are displayed. If needed, they can be corrected here or, if they are already correct, confirmed with **F3** (OK). After the last confirmation, all capacitor stages are switched off, and the auto configuration mode can be started. During the procedure, the stages are switched on individually, and the stage power is determined. This can be interrupted by pressing **F2** (STOP) at any time. The progress is illustrated in the status display. Along with this the connected capacitor stages are hooked up, **one after the other**. From the current consumption measured, the **multicom 4D6-ESBDS-1V1C6RO** determines the corresponding stage power. After successfully determining the stage power, the result is displayed and can be saved by confirming it (press button **F1** (Return) repeatedly, until the prompt **save parameters Yes / No** appears). If measurement errors have occurred, they can be discarded, and the mode can be restarted.

A prerequisite for performing the auto configuration mode is, however:

1. Measurement via a connected series transformer
2. Alternatively measurement via induced current transformer and current measuring module multisio 1D2-4CI
3. Correct programming of the primary and secondary voltage, and of the phase allocation
4. Correct programming of the primary and secondary current, and of the phase allocation
5. Correct programming of the primary and secondary current of the induced current transformer
6. Possibly additionally connected modules must be detected and stored with the help of the Settings → Module / Display → Module management menu item
7. The capacitor stages have to be connected
8. Active power output must be available
9. The currently measured $\cos\phi$ must be inductive

If all these prerequisites are met, the auto configuration mode of the stage powers can be started.

Under the item Stage parameters direct input, all stage parameters can also be entered manually. The following parameters are available:

1. Stage power from 0.00 to 999,9 kvar
2. Cabinet Nos. 1 to 6
3. Discharge time 0, 3, 30, 60, 300, 600, 900 sec.
4. Detuning 0, 5.5, 7, 8, 12.5, 14%
5. Operating cycle reset
6. Overtemperature switch-offs, reset
7. Facility type standard, combination filter, special
8. Special outputs fans / alarm relays programmable for terminals K5 (45) and C/S (30, 31). These outputs are by default assigned to fan and alarm relay, can however also be used as capacitor stages.

For a completely configured controller, the following window appears:

Cos	U/I	T	MM	St	U h	I h	Extra
	St	CMK	Q#		#		td
	1	1-1	20		7		60
	2	1-2	20		7		60
	3	1-3	20		7		60
	4	1-4	20		7		60
	-	1-5	Fan				
	-	--6	Error				
	5	211	50		7		60
	6	212	50		7		60
	7	213	50		7		60
			kvar		%		sec.
	←		↓		↑		Para

The following abbreviations apply:

- St stage
- CMK C = Cabinet No.
M = Module No
K = Capacitor stage output
- Q# Compensation power of stage, in kvar
- # Stage detuning in %
- te Stage discharge time in seconds
- ← # Cursor for stage selection with ↓ or ↑

Description of special outputs (K5, S) configuration as capacitor stage:

Menu Extras → Commissioning → Stages → Stage parameters:


After pressing button **F3** (stage) the following is displayed in the hot-key area:

Cos	U/I	T	MM	St	U h	I h	Extra
St	CMK		Q#				td
1	1-1		20		7		60
2	1-2		20		7		60
3	1-3		20		7		60
4	1-4		20		7		60
-	1-5		Fan				
-	--6		Error				
5	211		50		7		60
6	212		50		7		60
7	213		50		7		60
			kvar		%		sec.
←			↓		↑		Para

With the **F2** button (↓), select the item Fan or Alarm and start the entry by pressing **F4** (Para) and EDIT. You can only choose between fan and stage or alarm relay, stage and fan. Subsequently, leave the configuration menu by pressing **F1** repeatedly and accepting the changes by pressing **F3** (Yes).

5.14.2 Settings

Settings				Menu description
F1	F2	F3	F4	Display hot-key area
←	Mod.	Syst.	Serv	
			Service	
		System		
	Modules / display			
Return				

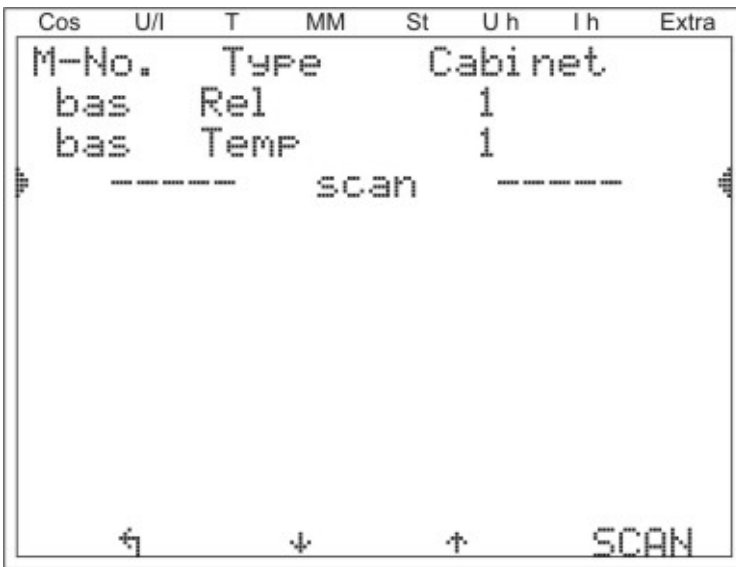


5.14.2.1 Submenu Modules/Display

The Modules/display submenu contains the following items:

1. ModuleManagement
2. Bus parameters
3. Display / Language

Under the item **Module management** the additionally connected modules (relay module 2D2-4RO, temperature module 2D2-1TI2RO and current measuring module 1D2-4CI) are scanned, deleted and configured.

Description of the module scan:

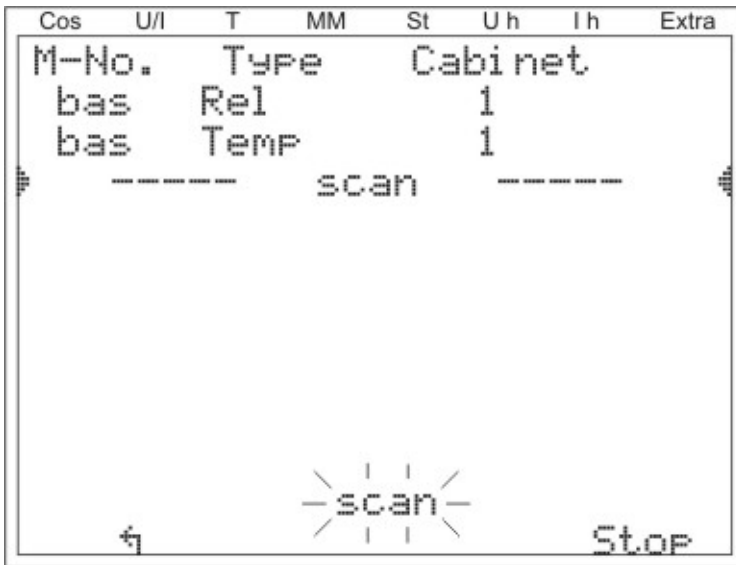


Press the button **F2** (+) to select the entry `scan` and start scanning by pressing **F4** (SCAN).

As long as `scan` display is flashing, the first and then all other moduls to be read in can be put into scan mode one after another by means of the scan button on the modules (see attachment Additional modules).

The module is recognized by the controller and can be associated to the respective cabinet.

As soon as all additional modules are read, the scanning mode is to be stopped by pressing **F4**. The list of modules can now be checked for completeness by pressing the buttons **F2** (+) and **F3** (+). The cabinet allocation can be changed with **F4** (Para).

Display example after module scan

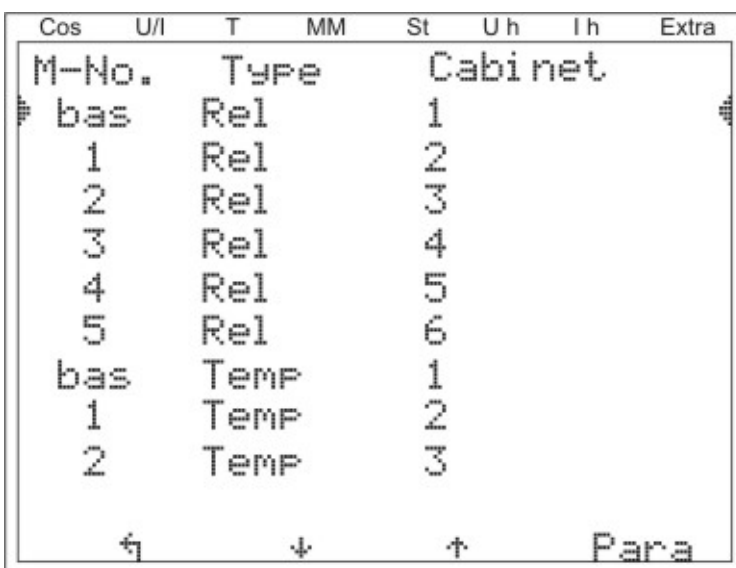

For previously set modules, the switchgear cabinet allocation can be changed by pressing **F4**.
 Further modules can be displayed and configured using **F2** (↵) and **F3** (⇨).

Module management **Menu description**

F1	F2	F3	F4	
↵	↵	⇨	Para	Display hot-key area
				Configuring switchgear cabinet No.
				Number of additional modules
				Number of additional modules
				Return

Parameters:
 Module management = Cabinet Nos. 1 to 6

After pressing the button **F4** (Para) the following is displayed in the hot-key area:

F1	F2	F3	F4	
↵	⇨	Del.	EDIT	Display hot-key area
				Configuring of switchgear cabinet No.
				Deleting the displayed scanned module
				Continue with submenus 3 and 4
				Return


Submenu 3: Module detection (flashing on and off). Here the corresponding module can be set to a flashing mode, so it can be uniquely allocated.

Submenu 4: Module type - Display and current firmware version of the module. For example Temp is entered here for the temperature input module, 1.01 as the firmware version and r013 as the release of the firmware version.

After pressing button **F4** (EDIT) the following display appears in the hot-key area of the display:

F1	F2	F3	F4	
NO	YES	⇨	+	Display hot-key area
				Enter value
				Leave setting menu and save
				Leave setting menu without saving

After pressing the button **F1** or **F2** the following display appears in the hot-key area of the display:

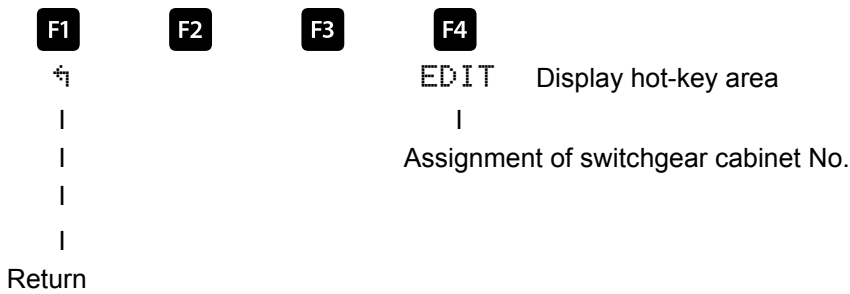


Note

Additional modules - function of the module DIP switches and module scan buttons see attachment!

With the item **Bus parameters**, the bus operation is configured (KBR eBus and Modbus). Here the bus address for the KBR eBus and the bus address and protocol type for the Modbus can be set.

Bus Parameter

Menu description

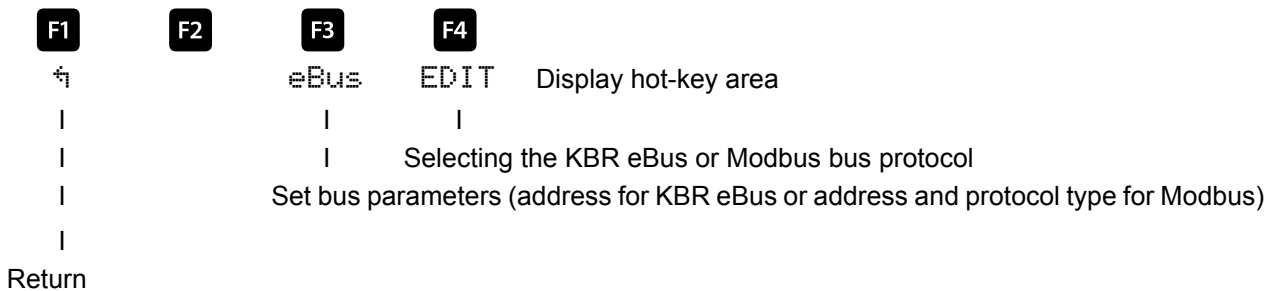

Parameters:

- Bus = KBR eBus or Modbus
- Bus address 0 to 9999 for KBR eBus
- Bus address 1 to 247 for Modbus
- Baud rate and bus protocol on Modbus:
 - ASCII or RTU
 - 4800, 9600 or 19200 baud
 - even, odd or no parity



Note

After adjusting the bus type (KBR eBus or Modbus) the controller is restarted, i.e. all hooked up capacitor stages are discarded and hooked up again.

Datenpunktbeschreibung siehe Hinweis unter Normen und Sonstiges (Technische Daten).

With the item **Display / Language**, the settings for the external LCD display and the user language German / English can be selected. In addition, the time setting can be made here and the total operating time for the controller can be queried. The setting to switch daylight saving time / standard time can be made here.

LCD display:

LCD Parameter		Menu description
F1	↵	Display hot-key area
F2		
F3		
F4		
	test	EDIT
		Settings for contrast and brightness
	Display test	
	Return	

Parameters:
 LCD = Contrast and brightness

Language:

Language		Menu description
F1	↵	Display hot-key area
F2		
F3		
F4		
	EDIT	Set user language (German / English)
	Return	

Parameters:
 Language = German / English

Runtime and clock:

Runtime / clock		Menu description
F1	↵	Display hot-key area
F2		
F3		
F4		
	Clock	Time setting and runtime display of controller
	Return	

Parameters:
 Runtime = Total operating time of controller
 Clock = time setting

After pressing button **F3** (clock), the following display appears in the hot-key area of the display:

Time / Date				Menu description
F1	F2	F3	F4	
↩	DST		EDIT	Display hot-key area
				Edit (Setting time and date)
	Daylight saving time - settings			
Return				

Parameter time/date = time (ss:mm) and date (dd:mm:yyyy)

After pressing button **F2** (DST), the following display appears in the hot-key area of the display:

Daylight saving time				Menu description
F1	F2	F3	F4	
↩			EDIT	Display hot-key area
				Edit (Auto/Off, Start and End)
Return				

Daylight saving time parameters = Auto (automatic adjustment), Off (adjustment disabled)
Start month and end month

5.14.2.2 Submenu System

The System submenu contains the following items:

1. Parameters
2. Reset

Under the item **Parameters**, the switching performance, temperature parameters and limits can be set.

The **switching performance** comprises the following options:

Switch-on and switch-off hysteresis	Input in %, in relation to the stage power of the smallest available capacitor stage
Switching times:	
Idle time after compensation	Input in seconds (0 - 300 sec.).
Alarm delay for FTS	Input in seconds (3 - 3000 sec.) until the message Facility Too Small is displayed, i.e. the alarm cosφ has not been reached after the set time has elapsed.
Switching interval	Input in seconds (0 to 10 sec.). Determines the interval in which the capacitor stages are switched on in case of missing compensation power, in order to reach the set target cosφ.

Damping coefficients

The damping coefficients (0 to 6) are used to reduce deviations in the display. The measuring cycle of the controller is not influenced.

The **temperature parameters** contain the basic enabling and disabling of the temperature measurement and the switching performance resulting from this. In addition the operating point and hysteresis for the fan switch and the operating point and hysteresis for the overtemperature switch-off can be set here. The following parameters are available for operating points and hystereses:

Operating point fan	= 0 to 70°C / hysteresis = 0°C to 25°C
Operating point alarm	= 0 to 70°C / hysteresis = 0°C to 25°C
Operating point overtemperature	= 0 to 70°C / hysteresis = 0°C to 25°C

The default settings are:

Operating point fan	= 28°C / hysteresis = 5°C
Operating point alarm	= 45°C / hysteresis = 5°C
Operating point overtemperature	= 48°C / hysteresis = 5°C

This means that the fan switches on when 28°C is exceeded and switches off again when temperature drops below 23°C. The overtemperature alarm is triggered when 45°C is exceeded and is reset when temperature drops below 40°C. The overtemperature stage switch-off turns on when 48°C is exceeded. After the temperature has dropped below 43°C the stages are hooked up again, if required, after the discharge time has elapsed. The overtemperature switch-offs for the individual stages are added together so that it can be determined later on whether, and in which cabinet, there are temperature problems (see menu Stages).

The overtemperature stage switching performance is as follows:

1.) Reducing the cabinet temperature when the alarm threshold is exceeded (prerequisite: at least 2 cabinets)

When the alarm temperature is exceeded and a dwell time of 3 minutes has elapsed, the device tries to replace the stage with an equivalent stage (same stage power and detuning, same type (thyro/contactor)) from a cabinet with low temperature. After a dwell time of another 3 minutes, the device tries to replace the next stage. If the cabinet temperature falls under the alarm temperature (not yet below hysteresis threshold), no further stage is replaced. (the hysteresis is not working!)

2.) Temperature as selection criterion when switching stages on or off

If the alarm temperature has been exceeded in a cabinet, the temperature is used as a criterion for selecting the stage to be switched.

If several stages with the same stage power and detuning reactor factor are available for selection, the stage with the higher cabinet temperature is preferred for switching off. For switching on, the stage with the lowest cabinet temperature is preferred.

The temperature is only used as a selection criterion if the alarm temperature is exceeded, as otherwise the stage "circuit switching" does not work anymore.

3.) Emergency shut-down

If the switch-off temperature is exceeded, only one stage is switched off at first. The next stage is not switched off until a dwell time of 2 minutes has elapsed.

If the temperature falls below the switch-off temperature (not yet below hysteresis), no other stages are switched off (due to overtemperature). On the other hand, no stages of this cabinet are switched on as long as the temperature does not fall below the hysteresis threshold.

As soon as the temperature falls below the hysteresis threshold, the stages in this cabinet are released for compensation.

Temperature measurement, incl. enabling:

Temperature parameters Menu description

F1	F2	F3	F4	
↵	Fan	Alarm	EDIT	Display hot-key area
				Enabling / disabling temperature measurement
				Operating point and hysteresis alarm relays and overtemperature switch-off
				Operating point and hysteresis fan relays and overtemperature switch-off
Return				

Parameters:

Temperature measurement	= active / inactive
Operating point fan	= 0 to 70°C / hysteresis = 0°C to 25°C
Operating point alarm	= 0 to 70°C / hysteresis = 0°C to 25°C
Operating point overtemperature	= 0 to 70°C / hysteresis = 0°C to 25°C



Note

The set temperature operating points and hysteresis are equally valid for the controller basic module and the additionally connected temperature module!

Moreover, limits are set for the overvoltage switch-off of the facility, monitoring of the capacitor contactor operating cycles and the switch-off of stages if voltage harmonics are too high.

The setting range of the overvoltage switch-off goes up to 150% of the measuring voltage, i.e. for a programmed measuring voltage of primarily 400V Ph-Ph the setting range is 230V to 346V Ph-N. The setting range is dependent on the programmed primary measurement voltage.

When the limit for the overvoltage switch-off is exceeded, the hooked up **Kompensationsstufen** are immediately switched off. After the temperature has dropped below the limit by 1% (of the limit) the **Kompensationsstufen** are hooked up again after the discharge time has elapsed.



Note

The default setting for the overvoltage limit is, for a measurement voltage of 230V Ph-N, about 10% more, i.e. 253V Ph-N. In case of operation via voltage transformer, the limit has to be set accordingly higher.

Example: For a voltage transformer of 500V Ph-Ph primary and 230 V Ph-Ph secondary, the limit has to be set to 550V Ph-Ph (500V Ph-Ph + 10% (=50V) equals 550V Ph-Ph).

This limit has to be configured manually!

Der **Grenzwert der Kondensatorschutzschaltspiele** dient als Hinweis für den Kunden, daß aufgrund der aufgelaufenen Anzahl der Schaltungen der Kondensatorschutz verschlissen sein könnte. Die Meldung **E09 GW Schaltspiele** beeinträchtigt jedoch in keiner Weise die Funktion der Kompensationsanlage. Sie dient lediglich als "Wartungshinweis".

Die Schaltspielzählung ist immer aktiv. Die Meldung **E09 GW Schaltspiele** wird jedoch nur ausgegeben, wenn die Anlage als **Standard-Anlage** definiert ist, d.h. alle Stufen werden durch Schütze geschaltet.

Bei einer **Sonder-Anlage** (Schütze und Thyristorschalter gemischt) wird diese Meldung unterdrückt. Ebenso wird keine Meldung ausgegeben, wenn der Grenzwert der Schaltspielzählung auf 0 gesetzt wird.

The **limit of the harmonic switch-off** refers on one hand to the total of all measurement voltage harmonics (Lim harm. U HD), on the other hand, limits may be assigned for each harmonic separately (3rd to 13th Harm. U). The programming range lies between 0 and 99%. Furthermore it can be set here whether the alarm relay should switch in case a limit is violated, stages should be switched off, or both. In addition, harmonics monitoring can be disabled here.

Under the item **Reset** there are various methods of resetting the programmed parameters of the controller. This has the advantage that not all programmed parameters are deleted at the same time, but only a specific range. The following reset options are available:

1. Commissioning - Reset: You can reset the parameters to the commissioning status, i.e. error state and current transformer ratio are deleted.
2. Reset limits: **Für Spannung Ph-N und Ph-Ph sowie der Spannungsoberschwingungen sowie die Eigenstromüberwachung.**
3. Reset extreme values: All maximum and minimum values recorded are deleted at once (overview of maximum and minimum values: cf. list).
4. Reset stage parameters: The stage parameters stage power, cabinet No., discharge time, detuning / reactor factor, operating cycle alarm limit, facility type, special outputs fans / error message relay are deleted for all stages at once.
5. Reset module parameters: All scanned temperature, relay and induced current measurement modules are deleted.
6. Reset to factory settings: Here, the programmable parameters are reset to default settings. A listing of the settings can be found in the attachment.
Technical data.

Reset functions:

reset				Menu description
F1	F2	F3	F4	
←	Commi		→	Display hot-key area
				continue to reset of limits, extreme values, stage parameters, module pa-
				rameters and reset to default settings
	Commissioning - Reset			
Return				

Parameters:

Reset = commissioning reset, limiting values, extreme values, stage parameters, module parameters and reset to factory settings

Overview of extreme values (maximum and minimum), can partially only be read out via KBR eBus or Modbus:

	Output	
Maximum: Voltage Ph-N	Display	Bus
Maximum: Voltage Ph-Ph	Display	Bus
Maximum: Current (main current)	Display	Bus
Maximum: cos Phi		Bus
Maximum: Power factor		Bus
Maximum: Voltage distortion factor	Display	Bus
Maximum: Total apparent power	Display	Bus
Maximum: Total active power	Display	Bus
Maximum: Total reactive power	Display	Bus
Maximum: Voltage 3rd harmonic	Display	Bus
Maximum: Voltage 5th harmonic	Display	Bus
Maximum: Voltage 7th harmonic	Display	Bus
Maximum: Voltage 9th harmonic	Display	Bus
Maximum: Voltage 11th harmonic	Display	Bus
Maximum: Voltage 13th harmonic	Display	Bus
Maximum: Voltage 15th harmonic	Display	Bus
Maximum: Voltage 17th harmonic	Display	Bus
Maximum: Voltage 19th harmonic	Display	Bus
Maximum: Total of harmonic currents		Bus
Maximum: Current 3rd harmonic		Bus
Maximum: Current 5th harmonic		Bus
Maximum: Current 7th harmonic		Bus
Maximum: Current 9th harmonic		Bus
Maximum: Current 11th harmonic		Bus
Maximum: Current 13th harmonic		Bus
Maximum: Current 15th harmonic		Bus
Maximum: Current 17th harmonic		Bus
Maximum: Current 19th harmonic		Bus
Maximum: Power frequency	Display	Bus
Maximum: Missing compensation power	Display	Bus
Maximum: Hooked up compensation power		Bus
Maximum: Temperature value main unit	Display	Bus
Maximum: Temperature value module 1	Display	Bus
Maximum: Temperature value module 2	Display	Bus
Maximum: Temperature value module 3	Display	Bus
Maximum: Temperature value module 4	Display	Bus
Maximum: Temperature value module 5	Display	Bus
Minimum: Voltage Ph-N		Bus
Minimum: Voltage Ph-Ph		Bus
Minimum: Current (main current)		Bus
Minimum: cos Phi		Bus
Minimum: Power factor		Bus
Minimum: Power frequency		Bus
Minimum: Missing compensation power		Bus
Minimum: Hooked up compensation power		Bus
Minimum: Apparent power	Display	Bus
Minimum: Active power	Display	Bus
Minimum: Reactive power	Display	Bus

	Output
Minimum: Temperature value main unit	Bus
Minimum: Temperature value module 1	Bus
Minimum: Temperature value module 2	Bus
Minimum: Temperature value module 3	Bus
Minimum: Temperature value module 4	Bus
Minimum: Temperature value module 5	Bus

5.14.2.3 Service submenu

The Service submenu contains the following items:

1. Hotline
2. Password
3. Firmware version

Under the item **Hotline** the service address and telephone hotline of the company KBR GmbH, Schwabach, can be displayed.

Under the item **Password**, changes to the controller parameters can be password-protected. The password can be any 4-digit number code. **The controller is defaulted with the code 9999, i.e. all functions of the device are available.**

Hotline (service / information):

Service				Menu description
F1	F2	F3	F4	
↵	Hot1.	Pass.	Vers.	Display hot-key area
				Firmware version display of main unit and display
				Password protection
				Service - Info
				Return

Password protection:

Password				Menu description
F1	F2	F3	F4	
↵			EDIT	Display hot-key area
				Enter password (programming protection)
				Return

Parameters:

Code = 4-digit number combination, **release code 9999: all device functions are available.**

Under the item **Firmware version**, the firmware states of the controller and the separated LC display can be shown. Here the term BS stands for Basic, 4. 00 for the Firmware version and r001 for the release of the firmware version of the basic module, 4. 00 stands for the firmware version and r001 for the current release of the firmware version of the display module.

The firmware version of possible connected additional modules can be displayed under Extras → Settings → Modules / display → Module management via the module configuration.

5.14.3 Messages

Messages				Menu description
F1	F2	F3	F4	
←	Info	Stat.	Rel.	Display hot-key area
				Allocation of alarm relays and stage switch-off
		Error state		
	actual error messages			
Return				

5.14.3.1 Messages submenu

The Messages submenu contains the following items:

1. actual error messages
2. Error state
3. Relay / stage switch-off

Under the item **actual error messages**, error messages are displayed that are temporary and do not have to be acknowledged, since they are shown for only as long as the error occurs. An exception to this is the message FTS (facility too small), which is both displayed as an error message and a status message.

Under the item **Error state**, messages are shown that must be deleted manually. This means that these messages, which are relevant for the flawless operation of the facility, do not go unnoticed.

The following status and error messages can be displayed:

Status messages

(must be acknowledged)

E01	Power failure has occurred
E02	A limit has been violated
E05	Reset has been performed
E09	Operating cycles of a stage above limiting value (contactor stage)
E10	Limit violation of voltage
E11	Current direction (k and l of the current transformer were swapped)
E12	Facility too small (FTS)
E13	Battery voltage critical
E14	Parameter error (default value replaces incorrect value)
E15	Input overload

Error messages

(must not be acknowledged)

		Possible action:
E17	No measurement voltage	Alarm relay Stage switch-off
E19	Stage power?	Alarm relay
E20	Facility too small (FTS)	Alarm relay
E21	Limit violated	Alarm relay
E22	Limit violated, stage switch-off active	Alarm relay Stage switch-off
E23	Stage switch-off temperature reached on at least one temperature probe (stage switch-off always active)	Alarm relay
E24	Alarm temperature exceeded or short circuit on any temperature probe, or broken wire	Alarm relay
E25	No measured current (for light load operation the stages are switched off after one hour)	Alarm relay
E26	Capacitor current too high (with induced current measurement)	Alarm relay
E27	Check fuse (for induced current measurement, no current increase due to connection of a stage)	Alarm relay
E28	Capacitance loss	Alarm relay
E29	Contacting defect (current does not decrease when stage is switched off)	Alarm relay
E30	Stage locked due to induced current error	Alarm relay
E33	Relay module 1 cannot be reached	Alarm relay
E34	Relay module 2 cannot be reached	Alarm relay
E35	Relay module 3 cannot be reached	Alarm relay
E36	Relay module 4 cannot be reached	Alarm relay
E37	Relay module 5 cannot be reached	Alarm relay
E38	Temperature module 1 cannot be reached	Alarm relay
E39	Temperature module 2 cannot be reached	Alarm relay
E40	Temperature module 3 cannot be reached	Alarm relay
E41	Temperature module 4 cannot be reached	Alarm relay
E42	Temperature module 5 cannot be reached	Alarm relay
E43	Induced current module 1 cannot be reached	Alarm relay
E44	Induced current module 2 cannot be reached	Alarm relay
E45	Induced current module 3 cannot be reached	Alarm relay
E46	Induced current module 4 cannot be reached	Alarm relay
E47	Induced current module 5 cannot be reached	Alarm relay
E48	Induced current module 6 cannot be reached	Alarm relay

Under the item **Relay / stage switch-off**, an action acc. to the list preceding list can be activated or deactivated when one of the error messages E17 to E48 is displayed.

For the error message **E24 alarm temperature exceeded or short circuit on any temperature probe, or broken wire**, an additional note is displayed in the main menu **Temperature**:

- SC = Short circuit
- BR = Broken wire
- NA = Temperature measurement not activated

5.14.3.2 Monitoring of stages by induced current measurement



Note

Monitoring is only performed when switching on or off additional stages!

If a stage is detected to be defective (**E26 Capacitor current too high**), a message is displayed. Limiting condition is the stage pattern of the stages created.

The error message **E27 Check fuse** is displayed if the current consumption of the facility (the cabinet in which the measurement is performed) does not change when a stage is switched on.
If the value does not change when a stage is switched off, the message **E29 Contactor defect** (stuck) is displayed.

5.14.3.3 Current consumption and performance monitoring of complete cabinets

Function under too high power consumption:

The cabinet is permanently monitored. The intervals between the measurements vary according to the number of connected modules (measurement intervals: 50 to 500 ms).

If the power consumption in a cabinet is too high, the stages in this cabinet are switched off one after the other until either all stages in the cabinet are switched off or the power consumption is within limits again.

Settings: The settings can be changed in the menu Extra => Settings => System => Parameters=> Limits => Lim-U => Lim +le

Can be set from: Maximum overflow between 110% to 200% of rated current.
Monitoring of the overflow is active or off.

Action in case of an error: Only the alarm relay switches.
The compensation stages are switched off.
The alarm relay switches and the compensation stages are switched off.
No action, just a message via the KBR eBus

In case of an error, an additional message is displayed on the LCD.

Example: E31 Lim le violated, cabinet No.: 2

For a **3-phase** induced current monitoring, a **current measuring module** multisio 1D2-4CI is required in each cabinet.

Using 1-phase induced current monitoring, one current measuring module can be used to monitor 4 cabinets. In this case, the cabinet allocation of the current measuring module is equivalent to the first interface of the current measuring module.

Example:

Current measuring module assigned to cabinet 1: Interface 1=Cabinet 1
Interface 2=Cabinet 2 etc.

Current measuring module assigned to cabinet 2: Interface 1=Cabinet 2
Interface 2=Cabinet 3 etc.

6 Basic device programming

The menu navigation of the **multicom 4D6-ESBDS-1V1C6RO** is self-explanatory.

The user is guided and supported by the device through operating hints on the display for that particular situation.

As an example of the basic procedure in programming, the functions in the menu **Commissioning** are used.

Menu item: Transformers

Transformers				Menu description
F1	F2	F3	F4	
↩	⏏ I	⏏ Ii	⏏ U	Display hot-key area
				Display and processing for voltage transformer
				Display and processing induced current transformer cabinets 1 to 6
				Display and processing for main current transformer
Return				

6.1 Set transformer

After pressing the button **F2** (**⏏ I**) the following display appears in the hot-key area of the display:

Transformers				Menu description
F1	F2	F3	F4	
↩	⏏ I	⏏ Ii	⏏ U	Display hot-key area
				Display and processing for voltage transformer
				Display and processing induced current transformer cabinets 1 to 6
				Display and processing for main current transformer
Return				

After pressing the button **F2** (**⏏ I**) the following display appears in the hot-key area of the display:

Transformers				Menu description
F1	F2	F3	F4	
↩			EDIT	Display hot-key area
				Configured transformer ratio current transformer
Return				

After pressing the button **F4** (EDIT) the following is displayed in the hot-key area:

F1	F2	F3	F4	
←	↕	↔	+	Display hot-key area
				Enter value
				Continue to next digit
				Scroll through the lines in the value area

Return

If the **setting was changed** the following display appears after the third line in the hot-key area of the display when the ↕ key (scrolling function) is pressed:

F1	F2	F3	F4	
NO	↕	YES		Display hot-key area
				Leave settings menu and save
				Scroll through lines in the value area

Leave setting menu without saving



Note

The settings for the voltage transformer are identical !

After pressing button **F3** (Ii) the following is displayed in the hot-key area:

F1	F2	F3	F4	
←	Para	+	EDIT	Display hot-key area
				Configure induced current transformer cabinet 1
				Continue with cabinets 2 to 6
				Select induced current measurement monophase or 3-phase

Return

After pressing the button **F4** (EDIT), the following display appears in the hot-key area of the display:

F1	F2	F3	F4	
←	↕	↔	+	Display hot-key area
				Enter value
				Continue to next digit
				Scroll through lines in the value area

Return

If the **setting was changed** the following display appears after the third line in the hot-key area of the display when the \pm key (scrolling function) is pressed:

F1	F2	F3	F4	
NO	\pm	YES		Display hot-key area
				Leave settings menu and save
				Scroll through lines in the value area
				Leave setting menu without saving

After pressing button **F3** (YES) the following is displayed in the hot-key area:

F1	F2	F3	F4	
\leftarrow	Para	\pm	EDIT	Display hot-key area
				Start configuration
				Continue with cabinets 2 to 6
				Select induced current measurement monophase or 3-phase
				Return

6.2 Set Target cos ϕ


After pressing the button **F3** (cos ϕ) the following is displayed in the hot-key area:

	Target cosine		Menu description	
F1	F2	F3	F4	
\leftarrow			EDIT	Display hot-key area
				Processing target cosine consumption, recovery and alarm cosine (FTS)
				Return

After pressing button **F4** (EDIT) the following display appears in the hot-key area of the display:

F1	F2	F3	F4	
\leftarrow	\pm	\rightarrow	\pm	Display hot-key area
				\pm Enter value
				Continue to next digit
				Scroll through lines in the value area
				Return

If the **setting was changed** the following display appears after the third line in the hot-key area of the display when the \pm key (scrolling function) is pressed:

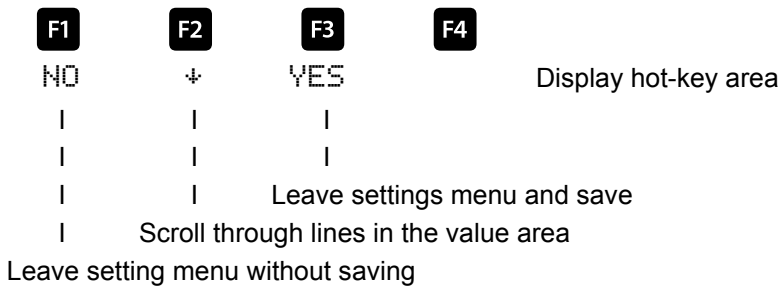

6.3 Note on detecting errors

Undercompensation, not enough stages are switched on.

Check controller for error displays. If the target cos phi is set to 0.8 capacitive, the capacitors have to be switched on. If the facility is not over-dimensioned, almost all stages need to be switched on. Check the main fuse and group fuses of the facility. All values are entered in the enclosed documents. The group fuses must display at least 1.7-times the value of the capacitor power.

If the fuses do not hold, despite their being correctly selected, the groups must be checked individually for excessive current input and for defective contactors.

Undercompensation, all stages are switched on.

The existing facility is not sufficient (e.g. due to new inductive consumers). Please contact your local representative (extend your facility). See the cover sheet of these operating instructions for the service telephone number, or menu item Extras / Settings / Service / Hotline.

Overcompensation, too many stages are switched on.

Check controller settings (target cos phi capacitive?).
Transformer connected in the wrong position?

Controller switches a lot, in particular during low load (at the weekend, during the night).

Check programming of the transformer ratio.
Switch on a small stage permanently (manually), if required.

If no cause of error is found, please call your local representative. The phone number can be found on the cover sheet of these operating instructions or in the menu item Extras / Settings / Service / Hotline.

6.3.1 Facility and safety devices maintenance

In order to ensure proper function and a long service life of your facility, the following checks have to be performed after commissioning and then once a year!

- Check and retighten all connections. Screwed connections may become loose at the beginning due to thermal stress.
- Check fuses, safety devices and switching equipment. Contactors are wear parts. If the contactor is intact, switching must take place without excessive formation of sparks.
- Check the controller behavior in automatic mode.
- Examine the cool air proportions (ventilators, temperature monitoring function):
 - Temperature relay of controller switches ventilators on at 28°C,
 - Temperature monitoring switches facility off via controller at 48°C.
- Clean filter mats, depending on how dirty they are.
- Visual inspection of capacitors for leaks (a reliable encapsulation of the dielectric is a prerequisite for the long life of the capacitor).
- Examine the current input and capacitor terminal voltage every three months.
- Inspect the reactive energy consumption by means of the electricity bill.


6.3.2 Limit temperatures

Valid for facilities in cabinets:

- + 35° C on a 24-hour average
- + 20° C on an annual average
- + 40° C short-term highest value
- 10° C lowest value

The above information applies particularly to reactor-connected facilities. The input current and the temperature of these facilities must be checked regularly so that an overload on the capacitors can be detected at an early stage. A higher input current can be caused by an increasing proportion of harmonics or by a change in capacity of capacitors.

6.4 Connection chart measuring voltage Ph-Ph

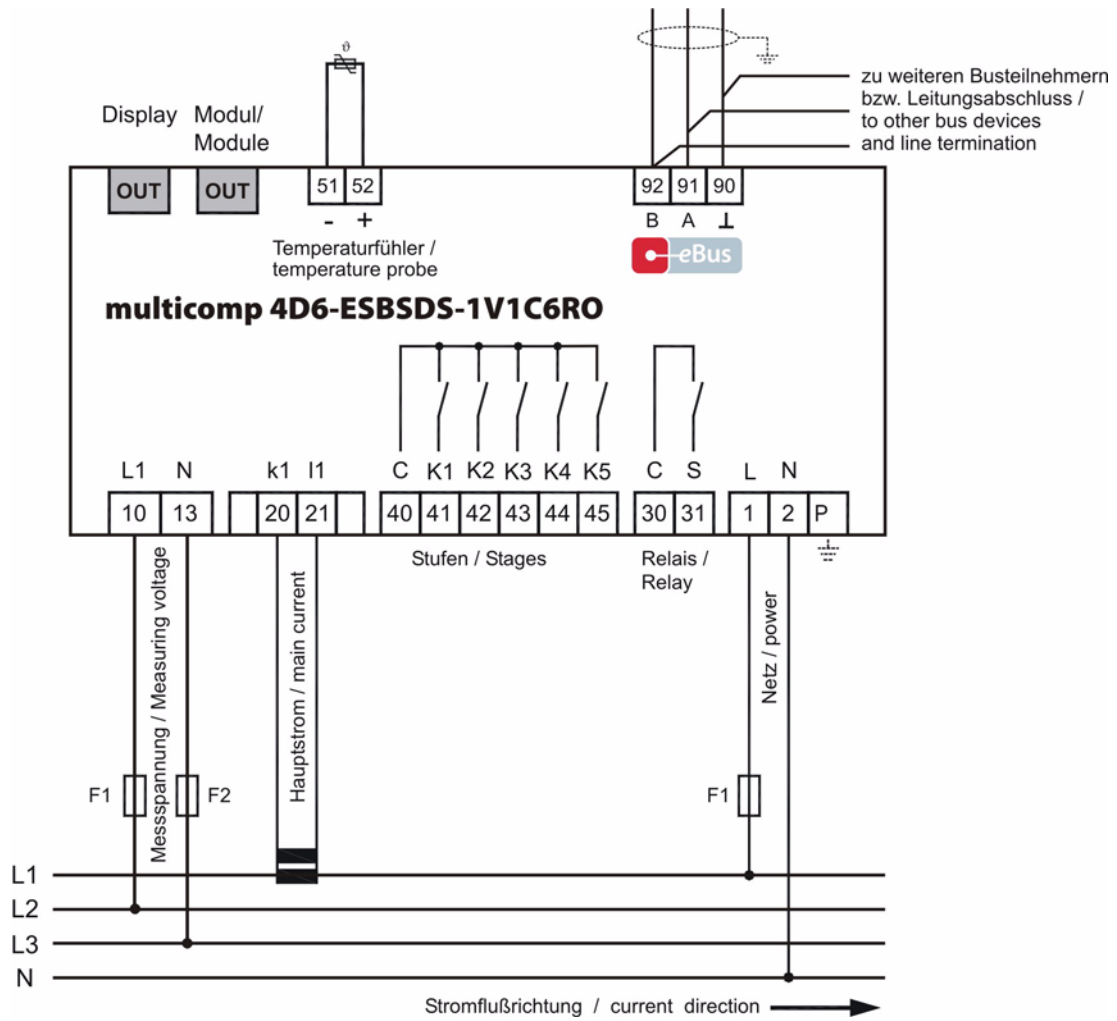

* For voltage supply, see nameplate.

7 Technical data

7.1 Measuring and display values

Voltage	Actual value of a measuring interval	Phase - 0 or phase - phase, depending on programming
	Units	[V, kV, MV] display is switched automatically
	Measuring range	0.00kV to 10.00 MV
Current	Actual value of a measuring interval	Actual value per phase
	Units	[A;kA] display is switched automatically
	Measuring range	0.00A to 10.00kA
Frequency	Power frequency measurement	f_{Grid} : measured with power supply correction
	Units	[Hz]
	Measuring range	40.....70Hz
Apparent power	Calculation	S_{total} ; three-phase
	Units	[VA; kVA; MVA, TVA] display is switched automatically
	Measuring range	0.00VA to 200TVA
Active power	Calculation	P_{total} ; three-phase
	Units	[W; kW; MW; TW]; display is switched automatically
	Measuring range	0.00W to 200TW
Reactive power	Calculation → ind. & cap.	Q_{total} ; distinction between ind./cap.
	Units	[Var; kvar; Mvar] display is switched automatically
	Measuring range	0.00VAr to 200TVAr
cosφ (fundamental shift)	Calculation → ind. & cap.	cosφ; distinction between ind./cap. cosφ in the display
	Measuring range	cosφ 0.1ind. <—1 —> 0.1cap.
Power factor	Measuring range	0.00 to 1.00, can only be read out via Bus
Temperature	Measuring range	-20°C to 100°C ± 2°C /
Harmonics	Distortion factor (THD) of voltage	Voltage: THD
	Partial distortion factors	3.; 5.; 7.; 9.; 11.; 13.; 15.; 17. and 19th harmonic of the voltage
	Units	[%]
	Measuring range	0.00% to 100%
Harm. Harmonics of the current	Current harmonics Total of current harmonics	3.; 5.; 7.; 9.; 11.; 13.; 15.; 17. and 19th harmonic for each phase Current: I_d
	Units	[A]
	Measuring range	0.00A to 999.9kA

7.2 Measuring accuracy

Current	± 2% / ± 1digit
Voltage	± 2% / ± 1digit
Power	± 4% / ± 1digit
Power factor	± 2% / ± 1digit
Frequency	± 0.1% / ± 1digit

7.3 Measuring principle

Reading	64 values per period
A/D converter	10 Bit
Measuring U and I	Acquiring measuring values for U and I simultaneously;
Updating speed (complete measuring cycle)	~ 330 ms
Calculation of harmonics	DFT with 64 points over one period
Frequency measurement	Mode: Voltage measurement between phase Lx - N / Ly); correct frequency measurement due to power supply correction

7.4 Device memory

Data storage	512 kB RAM battery-buffered
Program and parameter memory	256 kB flash
Memory type	Ring buffer
Extreme values (Max./Min.)	The highest values that have occurred (maximum indicator function) since switching on power supply or manually deleting extreme value
Event memory: Memory size	4096 events
Limit violations: acquisition time	≥ 550 ms

7.5 Power supply

Power supply	85 to 265V AC/DC; 15VA
--------------	------------------------

7.6 Hardware inputs

Measuring voltage input	U_{Ph-N} U_{Ph-Ph}	57.75V... 289V ...347V AC 100V ... 500V ...600V AC (over 500V AC Ph-Ph to 30,00kV AC Ph-Ph with voltage transformer auxiliary)
	Direct impedance	at least 2.5 MOhm
	Measuring range	programmable
Temperature input	Measuring range	-20°C to 100°C ± 2°C /
	- Connection for PT1000 temperature probe	
Measuring input for current		0.05A... 5A ...6A AC for x/5A - transformer 0.01A... 1A ...1.2A AC for x/1A - transformer
	Power consumption	≤2VA per input at 6A
	Measuring range	programmable

7.7 Hardware outputs

Relay outputs	stages	5 on the main device, one configurable as fan
	switching capacity	250V (AC) / 2A per Relay
Error message relay	switching capacity	250V (AC) / 2A floating, configurable as fan or stage
Interface	serial interface	RS-485
	bus protocol	KBR eBus / module bus
	transmission speed	38400 Baud, can be selected for Modbus
	addressing	can be addressed up to address 9999 for KBR eBus, scanning mode can be activated on the device bus addresses for Modbus 1 to 247 may be selected on the device
display and configuration interface	serial interface	RS -485 (RJ12)
Module bus interface	serial interface	RS-485 (RJ12) for ready-made KBR system cable (6 pole modular cable, unshielded), max. length 30 m when placed accordingly.

7.8 Electrical connection

Connection elements		Screw-type terminal																
Permissible cross section of the connection lines		2.5 mm ² (Bus connection and temperature probe 1.5mm ²)																
Measurement voltage inputs	Fuse protection	max. 6 A																
Measuring current input	Fuse protection	NONE!!! Always short-circuit current transformer terminals k and l prior to opening the circuit!																
Input Control voltage	Fuse protection	max. 6 A																
Relay output	Contact capacity	500VA, 2A, 250V and 50/60 Hz																
BUS connection	Connection material	For proper operation please only use shielded twisted-pair cables; e.g. I-Y(St)Y 2x2x0.8																
Transformer connection	Connections	see connection chart																
BUS connection	Pins for BUS connection via RS485	<table border="0"> <tr> <td>Device</td> <td>MULTIMASTER</td> <td>or</td> <td>interface adapter</td> </tr> <tr> <td>terminal 90 (⊥)</td> <td>→ Pin ⊥</td> <td>→</td> <td>see software manual</td> </tr> <tr> <td>terminal 91 (A)</td> <td>→ Pin A</td> <td>→</td> <td>see software manual</td> </tr> <tr> <td>terminal 92 (B)</td> <td>→ Pin B</td> <td>→</td> <td>see software manual</td> </tr> </table>	Device	MULTIMASTER	or	interface adapter	terminal 90 (⊥)	→ Pin ⊥	→	see software manual	terminal 91 (A)	→ Pin A	→	see software manual	terminal 92 (B)	→ Pin B	→	see software manual
Device	MULTIMASTER	or	interface adapter															
terminal 90 (⊥)	→ Pin ⊥	→	see software manual															
terminal 91 (A)	→ Pin A	→	see software manual															
terminal 92 (B)	→ Pin B	→	see software manual															

7.9 Mechanical data

Top hat rail device	Housing measures	90 x 106 x 61 mm (H x W x D),
	Mounting type	Wall mounting on DIN rail 7.5 mm deep, in accordance with DIN EN 50022 Suitable for distribution board mounting
	Weight	approx. 650g

7.10 Standards and Miscellaneous

Environmental conditions	Standards	DIN EN 60721-3-3/A2: 1997-07; 3K5+3Z11; (IEC721-3-3; 3K5+3Z11)
	Operating temperature	- 5°C+60°C
	Humidity	5%95%
	Storage temperature	-25°C+70°C
Electrical safety	Standards	DIN EN 61010-1/A2: 1996-05; (IEC1010-1/A2)
	Protection class	II, in accordance with DIN EN 61010-1/A2: 1996-05
	Overvoltage category	CAT III: U _{Ph-Ph} up to 400V
	Mode of protection	IP20 in accordance with DIN EN 40050 Part 9: 1993-05
	Electromagnetic compatibility	DIN EN 61000-6-3: 2005-06; (IEC 61000-6-3) DIN EN 61000-6-2: 2000-03; (IEC 61000-6-2)
Password protection	4-digit	Deleting and programming parameters on the device is not enabled if password protection is active.



Hinweis

Die Datenpunktbeschreibung für das Modbus-Protokoll steht Ihnen unter DTDTLX0035 / 2310-1 DE zur Verfügung.

7.11 Default settings after reset

Primary voltage / secondary voltage	400 V / 400 V Ph-Ph
Primary current / Secondary current	1000 A / 5 A
Cos ϕ 1 (target - Cos ϕ)	inductive 0.95
Cos ϕ 2 (target - Cos ϕ for recovery)	inductive 1.00
Cos ϕ 3 (alarm - cos ϕ for FTS message)	inductive 0.92
Damping coefficient for current and voltage	2
Temperature measurement	Active
Operating point fan	28°C, hysteresis 5°C
Operating point alarm	45°C, hysteresis 5°C
Operating point emergency off	48°C, hysteresis 5°C
Idle time	30 sec.
Alarm relay time	1200 sec.
Alarm relay	Break contact
Hysteresis connection	70% of smallest available stage
Hysteresis disconnection	100% of smallest available stage
Switch attenuation (stage interval)	8 sec.
Switching cycle limit	80.000
Stage power	No stage power programmed
Stages	Facility type standard
	Discharge time 60 sec.
	Detuning 7%
	Cabinet No. 1
	Stage 5 as fan
Harmonics monitoring	Enabled, THD 8%, error message is displayed
Induced current measurement	deactivated
Password	9999 / all functions can be accessed
Limiting value overvoltage switch-off	Active, 253V Ph-N, stages switch off, error message is displayed

Unchanged by a RESET:

Bus address
Date and time
Language


8 Appendix

8.1 Temperature module - connection chart

8.1.1 Terminal assignment

- Terminal 40: alarm relay C1
- Terminal 41: alarm relay K1
- Terminal 42: fan relay C2
- Terminal 43: fan relay K2
- Terminal 51: temperature probe PT 1000 (-)
- Terminal 52: temperature probe PT 1000 (+)


IN / OUT: Module bus / supply voltage

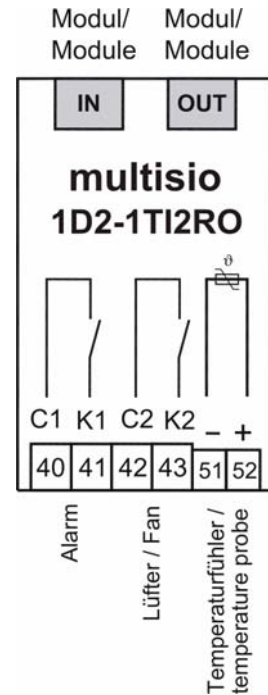

8.1.2 LED display

- LED1: Alarm relay (on = relay idle state, alarm)
- LED2: Fan relay (on = relay switched on, fan on)
- LED3: No PT 1000 connected, line open
- LED4: No PT 1000 connected, line short-circuited

LED5: Operating voltage

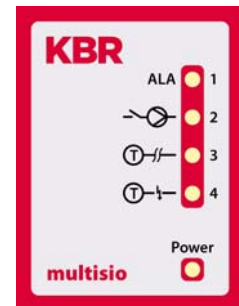


8.1.3 Additional modules – function of the DIP switches

Basis setting: all switches to off

If the switch S6 is set to On and switched back to Off after approx. 3 seconds (max. 6 seconds), the module will change to scanning mode.

- | | |
|------------------|---------------------|
| S5 = Off | S5 = On |
| S1 = no function | S1 = alarm relay on |
| S2 = no function | S2 = fan relay on |
| S3 = no function | S3 = no function |
| S4 = no function | S4 = no function |

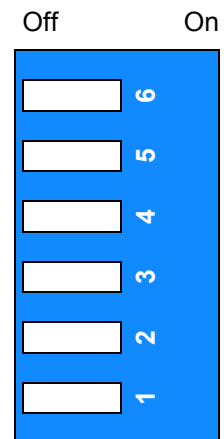


8.2 Relay module - connection chart

8.2.1 Terminal assignment

- Terminal 40: Shared connection (C)
- Terminal 41: Output relay 1 (K1)
- Terminal 42: Output relay 2 (K2)
- Terminal 43: Output relay 3 (K3)
- Terminal 44: Output relay 4 (K4)


IN / OUT: Module bus / supply voltage

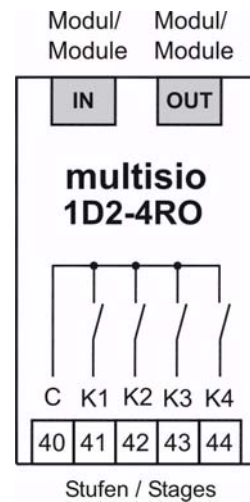

8.2.2 LED display

- LED1: Output relay 1 (K1) switched
- LED2: Output relay 2 (K2) switched
- LED3: Output relay 3 (K3) switched
- LED4: Output relay 4 (K4) switched

LED5: operating voltage

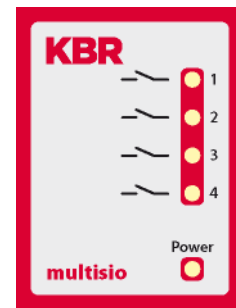


8.2.3 Function of the DIP switches

Basis setting: all switches to off

If the switch S6 is set to On and switched back to Off after approx. 3 seconds (max. 6 seconds), the module will change to scanning mode.

- | | |
|------------------|------------------|
| S5 = Off | S5 = On |
| S1 = no function | S1 = no function |
| S2 = no function | S2 = no function |
| S3 = no function | S3 = no function |
| S4 = no function | S4 = no function |

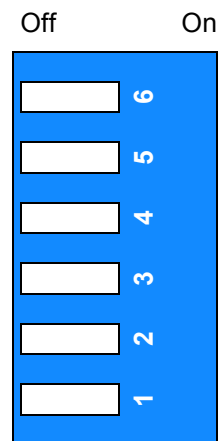

Attention:


The multisiso 1D2-4CI may only be operated with series-connected current transformers!
The transformers may not be grounded secondarily.
Up to the 690V network (phase to phase voltage), the connected current transformers have to be designed for a test voltage of at least 2500VAC for 1 minute.

8.3 Current measuring module - connection chart

8.3.1 Terminal assignment

IN / OUT: Module bus / supply voltage

- Terminal 20: transformer connection k 1
- Terminal 21: transformer connection l 1
- Terminal 22: transformer connection k 2
- Terminal 23: transformer connection l 2
- Terminal 24: transformer connection k 3
- Terminal 25: transformer connection l 3
- Terminal 26: transformer connection k 4
- Terminal 27: transformer connection l 4

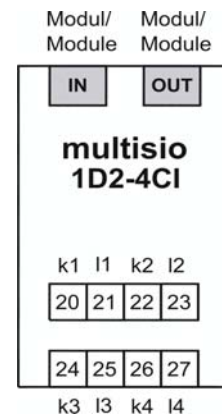

Note

Connect the current transformers according to the terminal numbers, i.e. transformer 1 to terminal 20/21, transformer 2 to terminal 22/23 etc.!


8.3.2 LED display

LED 1: operating voltage



8.3.3 Function of scan button

By pressing the button for a short time, the current measurement module is put into scan mode.

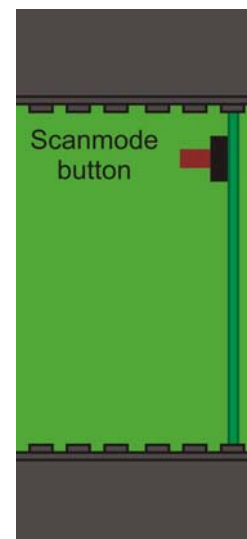


8.4 Temperature module - connection chart

8.4.1 Terminal assignment

Terminal 40: Relay input Alarm
 Terminal 41: Relay output Alarm
 Terminal 42: Relay input Fan
 Terminal 43: Relay output Fan

Terminal 51: Temperature input - PT1000
 Terminal 52: Temperature input + PT1000

IN / OUT: Module bus / supply voltage

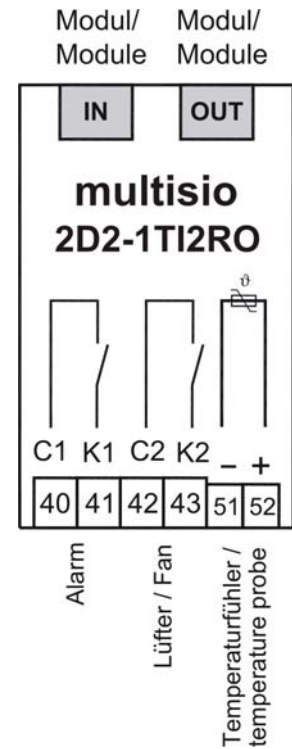

Note


The relay outputs of the module are floating relay outputs.

In KBR eBus scanning mode, all 4 input LEDs are flashing.
 In the module detection mode, the input LEDs generate a running light.

8.4.2 LED - Display

LED1 on: Alarm relay switched (contact open)
 LED2 on: Fan relay closed
 LED3 on: Temperature probe interrupted
 LED4 on: Temperature probe short circuit

Power LED: Operating voltage

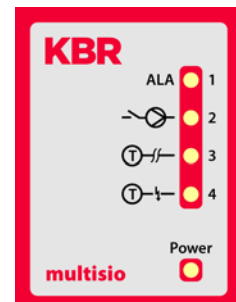

8.4.3 Function of scan button




Note

If the scan button is pressed briefly (until all LEDs light up for a short time), the module enters the scanning mode.

Switch setting illustrated:

OFF = white
ON = gray

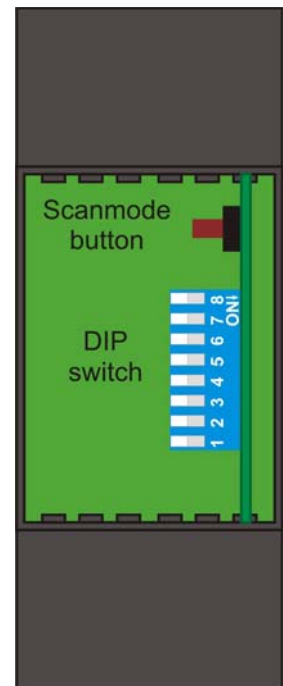


8.4.4 Function of the DIP switches

When switch is set to off:

S8 = no function
S7 = no function
S6 = no function
S5 = no function
S4 = no function
S3 = no function
S2 = no function
S1 = no function

When switch is set to on:

S8 = no function
S7 = no function
S6 = no function
S5 = no function
S4 = no function
S3 = no function
S2 = no function
S1 = no function

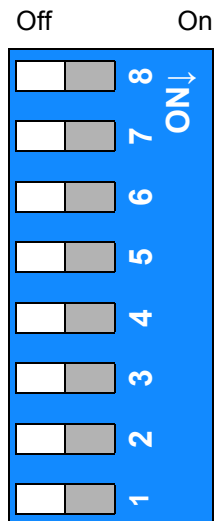


8.5 Relay module - connection chart

8.5.1 Terminal assignment

Terminal 40: shared connection (C)
 Terminal 41: output relay 1 (K1)
 Terminal 42: output relay 2 (K2)
 Terminal 43: output relay 3 (K3)
 Terminal 44: output relay 4 (K4)


IN / OUT: Module bus / supply voltage

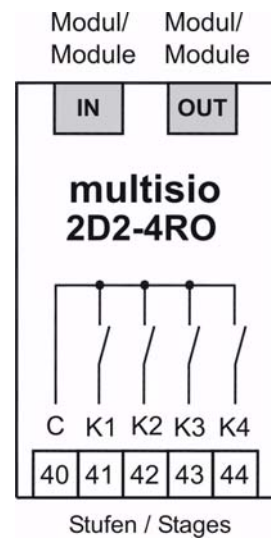

8.5.2 LED - Display

LED1 for: Output relay 1 (K1) switched
 LED2 for: Output relay 2 (K2) switched
 LED3 for: Output relay 3 (K3) switched
 LED4 for: Output relay 4 (K4) switched

Power LED: Operating voltage

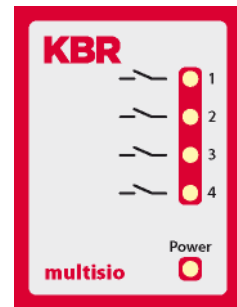

8.5.3 Function of scan button




Note

If the scan button is pressed briefly,
 the module enters the scanning mode.

Switch setting illustrated:

OFF = white
 ON = gray

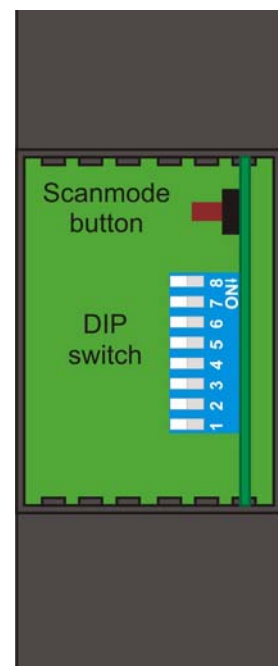

When switch is set to off:

S8 = no function
S7 = no function
S6 = no function
S5 = no function
S4 = no function
S3 = no function
S2 = no function
S1 = no function

When switch is set to on:

S8 = no function
S7 = no function
S6 = no function
S5 = no function
S4 = no function
S3 = no function
S2 = no function
S1 = no function

